




Your project deserves it.

## Operation Manual

# WIWA 500

Airless-Spritzpistole

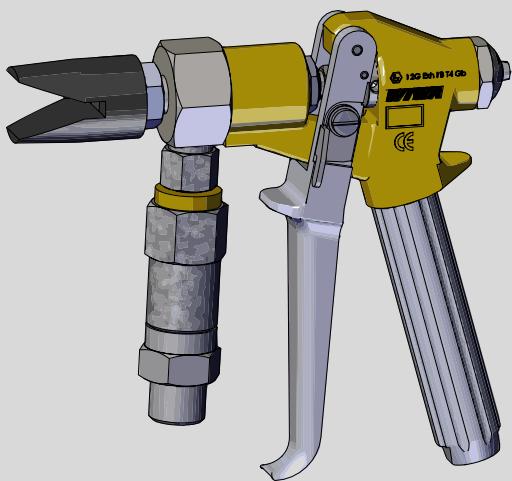

## EC declaration of conformity



in accordance with Annex II, No. 1 A of Machine Directive 2006 / 42 / EC,  
as amended by 2009 / 127 / EC

The company

WIWA Wilhelm Wagner GmbH & Co. KG  
35633 Lahnaus  
Gewerbestraße 1–3  
Germany

hereby declares that the spray  
gun type

WIWA 500

conforms with the provisions of the above directives.

Responsible for documentation: WIWA, +49 (0)6441 609-0



Lahnaus, January 8, 2025

Place, Date

Dipl.-Ing. (FH) Peter Turczak  
Managing Director

## EU declaration of conformity



in accordance with ATEX Directives

The company **WIWA Wilhelm Wagner GmbH & Co. KG**  
35633 Lahnau  
Gewerbestraße 1–3  
Germany

hereby declares that the spray gun type **WIWA 500**

conforms with the provisions of Directive 2014/34/EU.

The listed spray gun is assigned to Group II, Category 2G.

Labeling: II 2G Ex h IIB T4 Gb

Lahnau, January 8, 2025

Place, Date



Dipl.-Ing. (FH) Peter Turczak  
Managing Director



# Contents

<b>1</b>	<b>Foreword</b>	<b>1</b>
<b>2</b>	<b>Safety</b>	<b>3</b>
2.1	Explanation of symbols . . . . .	3
2.2	Safety notes . . . . .	6
2.2.1	Working pressure . . . . .	6
2.2.2	Risks due to the spray jet . . . . .	7
2.2.3	Risks due to electrostatic charge . . . . .	8
2.2.4	Risks due to hot surfaces . . . . .	8
2.2.5	Explosion protection . . . . .	9
2.2.6	Health risks . . . . .	10
2.3	Safety features . . . . .	11
2.3.1	Nozzle protector . . . . .	12
2.3.2	Safety lever . . . . .	12
2.3.3	Guard bracket . . . . .	12
2.4	Operating and maintenance personnel . . . . .	13
2.4.1	Obligations of the owner . . . . .	13
2.4.2	Personnel qualifications . . . . .	13
2.4.3	Authorized operator . . . . .	13
2.4.4	Personal protective equipment . . . . .	14
2.5	Warranty and liability . . . . .	15
2.5.1	Spare parts . . . . .	15
2.5.2	Accessories . . . . .	16
2.6	How to respond in an emergency . . . . .	16
2.6.1	Leakage . . . . .	16
2.6.2	Injuries . . . . .	17
<b>3</b>	<b>Description</b>	<b>18</b>
3.1	Intended use . . . . .	18
3.2	Erroneous use . . . . .	19
3.3	Model overview . . . . .	20
3.4	Construction . . . . .	23
3.5	Optional expansions and accessories . . . . .	25
<b>4</b>	<b>Transport and assembly</b>	<b>28</b>
4.1	Scope of delivery . . . . .	28
4.2	Assembly . . . . .	28
4.2.1	Inserting the spray nozzle . . . . .	29
4.2.2	Installing the push-in filter in the handle . . . . .	29
4.2.3	Connecting the material hose . . . . .	30

<b>5 Operation</b>	<b>31</b>
5.1 Putting the spray gun into operation . . . . .	31
5.1.1 Setting the spraying pressure . . . . .	31
5.1.2 Tips for good coatings . . . . .	32
5.1.3 Tips for good coatings – with external mixing .	33
5.2 Work interruption . . . . .	33
<b>6 Maintenance</b>	<b>34</b>
6.1 Maintenance schedule . . . . .	35
6.2 Lubricating the spray gun . . . . .	35
6.3 Setting the play or grip width of the trigger . . . . .	35
6.4 Cleaning the push-in filter . . . . .	36
6.5 Replacing the packing and valve needle . . . . .	38
6.6 Cleaning the guide sleeve . . . . .	40
6.7 Replacing the gaskets on the gun handle . . . . .	41
<b>7 Eliminating operational faults</b>	<b>43</b>
<b>8 Spare parts list</b>	<b>44</b>

## 1 Foreword

Dear valued customer,

We are delighted that you have chosen one of our spray guns.

This operation manual is directed at the operating and maintenance personnel. It contains all information required in order to handle this spray gun.



The owner must ensure that the operating and maintenance personnel always have access to a copy of the operation manual in a language that they understand.

In addition to the operation manual, further information is also essential for the safe operation of this spray gun. Read and observe the directives and accident prevention regulations valid in your country.

In Germany, these are:

- ▶ DGUV 100-500, chap. 2.29 "Processing coating materials",
- ▶ DGUV 100-500, chap. 2.36 "Working with fluid jets",

both from the professional association for gas, district heating and water management.

We recommend enclosing all relevant directives and accident prevention regulations with the operation manual.

Furthermore, always observe the safety data sheets, manufacturer's instructions and processing guidelines for coating or conveyance materials.

If questions should arise, we would be happy to assist you. We wish you excellent working results with your spray gun

WIWA Wilhelm Wagner GmbH & Co. KG

### **Copyright**

© 2025 WIWA

The copyright to this operation manual belongs to  
WIWA Wilhelm Wagner GmbH & Co. KG  
Gewerbestraße 1–3 • 35633 Lahnau • Germany  
Phone: +49 (0)6441 609-0 • Fax: +49 (0)6441 609-2450  
Email: info@wiwa.de • Website: www.wiwa.de

This operation manual is intended exclusively for the preparation, operating and maintenance personnel. It is expressly prohibited to distribute this operation manual, duplicate, exploit or communicate its contents, unless expressly authorized to do so. Infringement will lead to compensation. All rights to any patent, utility model or design registrations are reserved.

## 2 Safety

This spray gun has been designed and manufactured with consideration to all safety aspects. It reflects current engineering practice and the valid accident prevention regulations. The spray gun has left the factory in faultless condition and guarantees a high level of technical safety. However, improper operation and misuse will pose a risk to:

- the life and limb of the operator or third parties,
- the machine and other property of the owner,
- the efficient function of the machine.

It is fundamentally prohibited to implement any method of work that has a negative influence on the safety of the operating personnel and the spray gun. All persons involved in the commissioning, operation, care, repair and maintenance of the spray gun must have read and understood the operation manual beforehand – in particular the “Safety” chapter.

### **Your safety depends on it!**

We recommend that the spray gun operator have this confirmed in writing.

### 2.1 Explanation of symbols

Safety notes give warning of potential accident risks and describes the measures required for accident prevention. In the **WIWA** operation manuals, safety notes are highlighted and labeled as follows:

#### DANGER

Signals a risk of accidents that are very likely to result in serious injuries and even death, if the safety note is not observed!

#### WARNING

Signals a risk of accidents that may result in serious injuries and even death, if the safety note is not observed!

**CAUTION**

Signals a risk of accidents that may result in injuries, if the safety note is not observed!



Signals important information for working correctly with the spray gun. A failure to observe this may result in damage to the machine or its environment.

Various pictograms are used in the safety notes for accident risks that may result in injury, depending on the hazard source — examples:



General risk of accident



Risk of explosion due to explosive atmosphere



Risk of explosion due to explosive substances



Risk of accident due to electricity or electrostatic charge



Warning of corrosive substances



Risk of crushing due to moving parts



Risk of injuries due to rotating parts



Risk of burning due to hot surfaces



Risk of freezing due to cold surfaces

The first line of the safety instructions indicates the personal protective equipment that must be worn. This is also highlighted and labeled as follows:



#### **Wear protective clothing**

Signals an instruction to wear the prescribed protective clothing, in order to prevent skin injuries due to the processing material or gases.



#### **Use eye protection**

Signals an instruction to wear protective goggles, in order to prevent eye injuries due to material spray, gases, vapors or dust.



#### **Use ear defenders**

Signals an instruction to wear ear defenders, in order to prevent damage to hearing caused by noise.



#### **Use respiratory protection**

Signals an instruction to use respiratory protection, in order to prevent damage to the respiratory tract caused by gases, vapors or dust.



#### **Wear protective gloves**

Signals an instruction to use respiratory protection, in order to prevent damage to the respiratory tract caused by gases, vapors or dust.



#### **Wear safety shoes**

Signals an instruction to wear safety shoes, in order to prevent foot injuries due to falling, toppling or rolling objects, as well as slipping on slippery floors.



Signals references to directives, work instructions and operation manuals that contain very important information and must be observed.

## 2.2 Safety notes



### WARNING

Always remember that the spray gun is operated with very high pressures and can cause life-threatening injuries if handled incorrectly!



Always observe and follow all the information in this operation manual and in the operation manual of the spraying device on which the spray gun is operated.

### 2.2.1 Working pressure



### WARNING

Parts that are not designed for the maximum permissible working pressure may rupture and cause serious injuries.

- The maximum permissible working pressure of the spray gun must be the same or greater than the maximum permissible working pressure of the spraying device on which it is operated.
- Material hoses and hose assemblies must comply with the maximum working pressure, including the required safety factor.
- Material hoses may not exhibit leakage, kinks, signs of wear or bulges.
- Hose assemblies must be tight.

## 2.2.2 Risks due to the spray jet



### WARNING

The material exits the spray gun under very high pressure. The spray jet can cause serious injuries through its cutting action, or by penetrating the skin or eyes.

- Never aim the spray gun at yourself, other persons or animals!
- Never hold your fingers or hand in front of the spray gun!
- Never reach into the spray jet!
- Always hold the spray gun tightly in your hands while working since great recoil forces can arise at high working pressures.



### WARNING

An unintended ejection of material from the spray gun can cause personal injury and property damage.

- Secure the spray gun whenever interrupting work!
- Prior to each commissioning, always check the spray gun lock!

### 2.2.3 Risks due to electrostatic charge



#### WARNING

The high flow velocities in the airless or AirCombi spray process can result in an electrostatic charge. Static discharges can result in fire and explosions.

- ▶ Ensure that the machine is correctly grounded!
- ▶ Also ground the object that is to be coated.
- ▶ Never spray solvents or materials containing solvents into narrow-mouthed cans or drums with a bung opening!
- ▶ Only use electrically conductive material hoses. All original material hoses from **WIWA** are conductive and designed for our devices.
- ▶ Only use electrically conductive accessories/accessory parts.



#### WARNING

Dirty machines can become electrostatically charged. Static discharges can result in fire and explosions.

- ▶ Keep the machine clean.
- ▶ Always perform cleaning work outside of EX zones.

### 2.2.4 Risks due to hot surfaces



#### CAUTION

When using material heaters on the spraying device being used, the spray gun can get hot. A risk of burns exists.

- ▶ When processing heated materials always wear protective gloves with forearm protection!
- ▶ The material hoses may not touch the hot surfaces of the material heater.

## 2.2.5 Explosion protection

The following short designations are used in the instructions of **WIWA**:

- ▶ Ex protection: Explosion protection
- ▶ Ex area: potentially explosive or non-explosion protected area
- ▶ Non-Ex area: non-explosive or explosion protected area
- ▶ Ex zone: Explosion protection zone according to ATEX Directive
- ▶ ATEX knowledge: Knowledge of explosion protection according to ATEX Directive



Devices that are not explosion-protected must not be used in operating facilities that fall under the explosion protection ordinance!

Explosion-protected machines can be identified by the corresponding  mark on the type plate and/or the ATEX declaration of conformity provided.

Explosion-protected devices fulfill the requirements of the ATEX Directive for the device group, device category and temperature class cited on the device or in the declaration of conformity.

The owner is responsible for designating the zoning in accordance with ATEX Directive, Appendix II, No. 2.1–2.3 in accordance with the stipulations of the responsible regulatory body. The owner is required to check and ensure that all technical data and labeling comply with the applicable stipulations according to ATEX.

For applications, whereby a failure of the device can lead to dangers to personnel, the owner is required to implement appropriate safety measures.

## 2.2.6 Health risks



### CAUTION

Depending on the materials being processed, solvent vapors may arise, which could cause damage to health and property.

- Make sure the workplace is sufficiently ventilated and aired.
- Always observe the safety data sheets and processing instructions of the material manufacturer.



When handling paint, solvents, oils, greases, and other chemical substances, observe the safety and portioning instructions of the manufacturer and the generally applicable regulations.



Only use suitable skin protection, skin cleansing and skincare products for cleansing the skin.

In systems that are closed or under pressure, dangerous chemical reactions may arise, if parts produced from aluminum or galvanized parts come into contact with 1,1,1 - trichloroethane, methylene chloride or other solvents that contain halogenated chlorinated hydrocarbons (CFCs). If you wish to process materials that contain the aforementioned substances, we recommend that you contact the material manufacturer to clarify their suitability for use.

A range of machines in rust and acid-resistant designs is available for these types of materials.

## 2.3 Safety features



### WARNING

If one of the safety features is missing or is not fully functional, the operating safety of the device is not guaranteed!

- Take the device out of service immediately if you detect defects on the safety features or any other faults on the device.
- Only put the device back into operation once the faults have been fully rectified.

The device is equipped with the following safety features:

No.	Designation
1	Nozzle protector
2	Safety lever
3	Guard bracket

Check the safety features on the device:

- Prior to commissioning,
- Always prior to starting work,
- After all set-up work,
- After all cleaning, maintenance, and repair work.

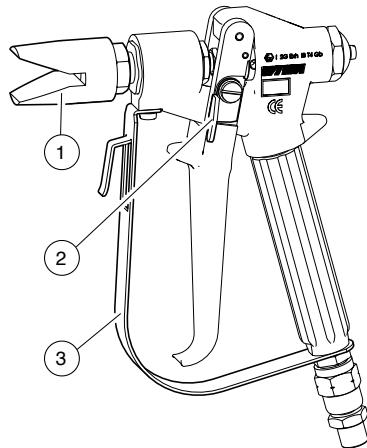


Fig. 1: Safety features on the spray gun

### Checklist:

- Function of the safety lever OK?
- Nozzle protector securely installed?
- Guard bracket securely installed and undamaged?

### 2.3.1 Nozzle protector

The nozzle protector prevents damage to the spray nozzle, which can arise e.g. if the spray gun falls down.

Furthermore, contact with the palm of your hand with the spray jet directly at the nozzle outlet is prevented.



#### WARNING

If the spray gun is operated without the nozzle protector, serious injuries and property damage can result.

- ▶ Never put the spray gun into operation without the nozzle protector.

### 2.3.2 Safety lever

The spray gun is secured against unintentional actuation with the safety lever. Put the safety lever horizontal for this.



The spray gun must be secured during each interruption of work – even if it is very short.

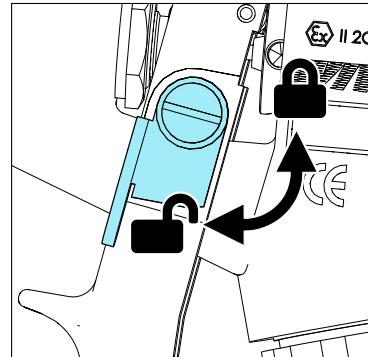


Fig. 2: Safety lever

### 2.3.3 Guard bracket

The guard bracket secures the spray gun against an unintentional actuation of the trigger – e.g. due to the spray gun being bumped or falling down.

## 2.4 Operating and maintenance personnel

### 2.4.1 Obligations of the owner

The owner:

- is responsible for training the operating and maintenance personnel,
- must instruct the operating and maintenance personnel on correct handling of the spray gun, and on wearing the correct work clothing and protective equipment,
- must make work aids, such as lifting gear for transporting the spraying device or container, available to the operating and maintenance personnel,
- must make the user manual accessible to the operating and maintenance personnel and must ensure that it remains constantly available,
- must ensure that the operating and maintenance personnel have read and understood the user manual.

Only then are they permitted to put the spray gun into operation.

### 2.4.2 Personnel qualifications

Differentiation is made between two groups of personnel, depending on their qualifications:

- **Instructed operators** have received verified instruction from the spray gun owner regarding the tasks entrusted to them and the possible risks in the event of incorrect conduct.
- **Trained personnel** have received instruction provided by the spray gun manufacturer and are capable of carrying out maintenance and repair work on the spray gun, independently recognizing possible dangers and avoiding risks.

### 2.4.3 Authorized operator

Activity	Qualification
Set-up and operation	Instructed operator
Cleaning	Instructed operator
Maintenance	Trained personnel
Repair	Trained personnel



Children, young persons under the age of 16 and untrained personnel may not operate this spray gun.

#### 2.4.4 Personal protective equipment



##### **Wear protective clothing**

Always wear the protective clothing stipulated for your working environment (e.g. anti-static protective clothing in potentially explosive areas) and also observe the recommendations in the safety data sheet of the material manufacturer.



##### **Use Eye Protection**

Wear protective goggles in order to prevent eye injuries due to material spray, gases, vapors or dust.



##### **Use Ear Defenders**

Suitable noise protection equipment must be made available to the operating personnel. The machine owner is responsible for compliance with the accident prevention regulation "Noise" (BGV B3). It is therefore necessary to pay particular attention to the conditions at the installation site – for example, noise pollution can increase if the machine is installed in or on hollow bodies.



### Use respiratory protection

Although the airless and AirCombi spray processes minimize the paint mist with the right pressure adjustment and correct work method, we recommend that you use a respiratory protection mask.



### Wear Protective Gloves

Wear anti-static, chemical-resistant protective gloves with forearm protection to prevent injuries due to aggressive chemicals, burns when processing heated materials, or freezing due to contact with very cold surfaces.



### Wear Safety Shoes

Wear anti-static safety shoes, in order to prevent foot injuries due to falling, toppling or rolling objects, as well as slipping on slippery floors.

## 2.5 Warranty and liability

Except when otherwise stipulated,

- our General Terms and Conditions (GTC) apply for deliveries within Germany,
- our Orgalime SI 14 apply for deliveries to all other countries.

### 2.5.1 Spare parts

- When maintaining and repairing the spray gun, only original spare parts from **WIWA** may be used.
- If spare parts are used, that have not been produced or supplied by **WIWA**, the warranty is voided and all liability shall be excluded.

## 2.5.2 Accessories

- If you use original **WIWA** accessories, their suitability for use in our machines is guaranteed.
- If you use third-party accessories, these must be suitable for the spray gun – in particular with respect to the working pressure, the connection variables, and use in Ex-zones, if applicable. **WIWA** will not be liable for any damage or injuries due to these parts.
- It is essential to observe the safety provisions applicable to the accessories. You can find these safety provisions in the separate operation manuals for the accessories.

## 2.6 How to respond in an emergency

### 2.6.1 Leakage



#### WARNING

In case of leakage, material may escape under very high pressure and cause serious personal injuries and property damage.

- Immediately shut down the spraying device and relieve the pressure. Observe and follow the information in the user manual of the spraying device for this.
- Tighten threaded connections and replace defective parts (must be performed by trained personnel).
- Do not seal leakage at connections and on high pressure hoses with the hand or by wrapping.
- Do not patch material/high pressure hoses!
- Check hoses and threaded connections for leak-tightness before starting the spraying device up again.

## 2.6.2 Injuries

In case of injuries caused by processing material or cleaning agents, always have the safety data sheet ready to show to the doctor (supplier or manufacturer address, their telephone number, material designation and material number).


### 3 Description

It has a maximum permissible working pressure of 500 bar (250–300 bar for **WIWA 500 FD** with external mixing) and a maximum permissible material temperature of 80 °C.

This data is also noted directly on the gun body like the CE and ATEX marking.


The **WIWA 500** with light-moving four-finger trigger was specially developed for coating large areas.

The **WIWA 500** can be used in connection with all known airless spraying devices.

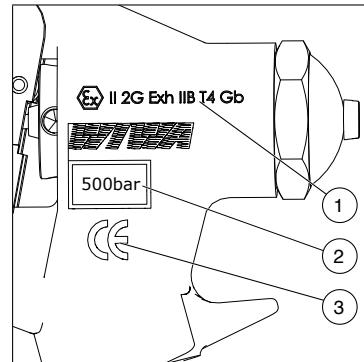

**Fig. 3:** Data on the gun body

No.	Designation
1	ATEX marking
2	Max. working pressure
3	CE mark
4	Max. material temperature

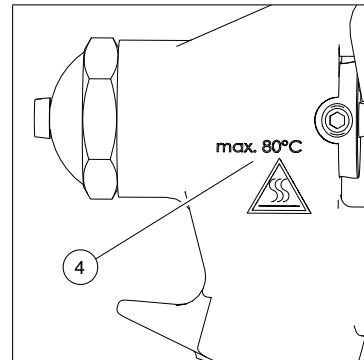

**Fig. 4:** Data on the gun body

#### 3.1 Intended use

The **WIWA 500** is intended for applying low-viscosity to high-viscosity materials in the commercial and industrial sector.



Intended use also includes:

- ▶ observing the technical documentation and
- ▶ complying with the operating, maintenance and servicing guidelines.

### 3.2 Erroneous use

Any use other than that stipulated in the technical documentation is deemed to be erroneous use, may result in personal injury or property damage, and will void the warranty.

Erroneous use applies in particular if

- ▶ impermissible materials are processed,
- ▶ unauthorized modifications or changes are implemented,
- ▶ the safety features are removed, modified or bypassed,
- ▶ spare parts are installed that were not manufactured or delivered by **WIWA**,
- ▶ accessories are used that are not suitable for the machine (see section 2.5.2 on page 16),
- ▶ spray guns without  $\text{Ex}$  identification are used in potentially explosive atmospheres,
- ▶ the spray gun is operated outside of the operating limits according to the type plate.

### 3.3 Model overview

The model designation 500 (= 500 bar max. working pressure) is specified by the following letters:

- ▶ D = swivel joint
- ▶ F = front connection
- ▶ FI = push-in filter M200 in the handle

Model	Art. no.	Material connection	Nozzle connection	Nozzle protector	Other
500	0011479	fixed	11/16" UNS	standard	
500 D	0015016	Swivel joint	11/16" UNS	standard	
500 D-FI	0015105	Swivel joint	11/16" UNS	—	Push-in filter
500 D	0643409	Swivel joint	7/8"	for re-versible nozzles	
500 D-FI	0646452	Swivel joint	7/8"	—	Push-in filter
500 D	0662603	Swivel joint	11/16" UNS	—	
500 F	0012092	Front	11/16" UNS	standard	
500 F	0643411	Front	7/8"	for re-versible nozzles	
500 FD	0644977	Front swivel joint	11/16" UNS	standard	Front connection 1/2" NPSM
500 FD	0647352	Front swivel joint	7/8"	for re-versible nozzles	Front connection 1/2" NPSM
500 F	0647352A	Front	7/8"	for re-versible nozzles	Front connection 1/2" NPSM

<b>Model</b>	<b>Art. no.</b>	<b>Material connection</b>	<b>Nozzle connection</b>	<b>Nozzle protector</b>	<b>Other</b>
500 FD	0658752	Front swivel joint	11/16" UNS	standard	Front connection 1/2" NPSM, valve needle Ø 5 mm
500 FD	0669799	Front swivel joint	7/8" UNS	standard	Valve needle Ø 5 mm
500 FD	0667400	Front swivel joint 1/2" NPSM (A/B)	11/16" UNS	for reversible nozzles	External mixing, reversing switch with reversible nozzle

Unless otherwise specified, the spray guns have the following features:

- 4 finger trigger with metal handle
- Valve needle Ø 3 mm
- Material connection thread 1/4" NPSM (on the swivel joint or front connection)
- Max. working pressure: 500 bar
- Max. material temperature: 80 °C

The model series 500 **D** and 500 **FD** are equipped with a **swivel joint** at the material inlet, which enables the flexible use of the spray gun without twisting the material hose.

The difference from the model series 500 **FD** and 500 **F** to the other spray guns of the series 500 is the **front connection** for the material hose. Since the material is not routed through the gun handle, these model series are suitable for processing heated materials.

The spray guns of the model series 500 **F** **with rustproof material guiding** (Art. no. 0012092 and 0643411) are ideal for hot spraying processes and are suitable for water-based coatings.


The spray guns of the model series 500 **FD** (Art. no. 0647352, 0644977, 0658752 and 0669799) **with extra large material passages** and swivel joint are ideal for high-viscosity materials such as intumescent flame proofing materials.

In the model 500 **FD with external mixing** (Art. no. 0667400), two gun bodies are combined for the simultaneous processing of two components. Component A (accelerator) is injected laterally into the main spray jet via a bypass, whereby the curing time and possible coating thickness can be influenced.




Additional information on the thread and connection variables can be found in the spare part lists.

### 3.4 Construction

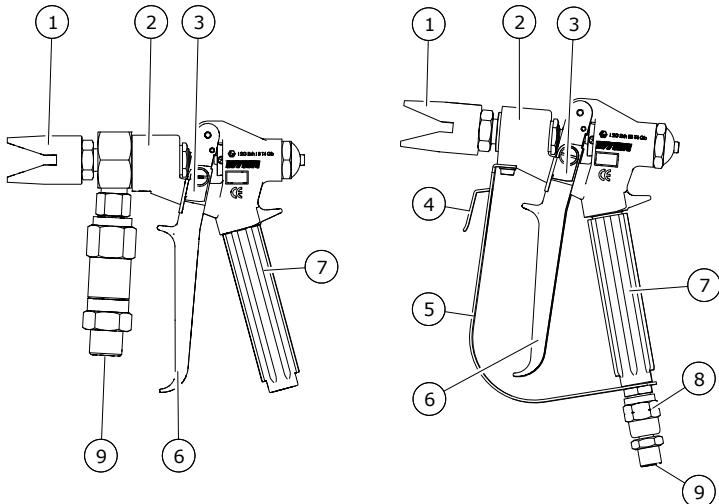

**Fig. 5:** Model series 500 F and 500 D

No.	Designation
1	Nozzle protector
2	Gun body
3	Safety lever
4	Suspension hook
5	Guard bracket
6	Four-finger trigger
7	Gun handle
8	Swivel joint
9	Connection for the material hose

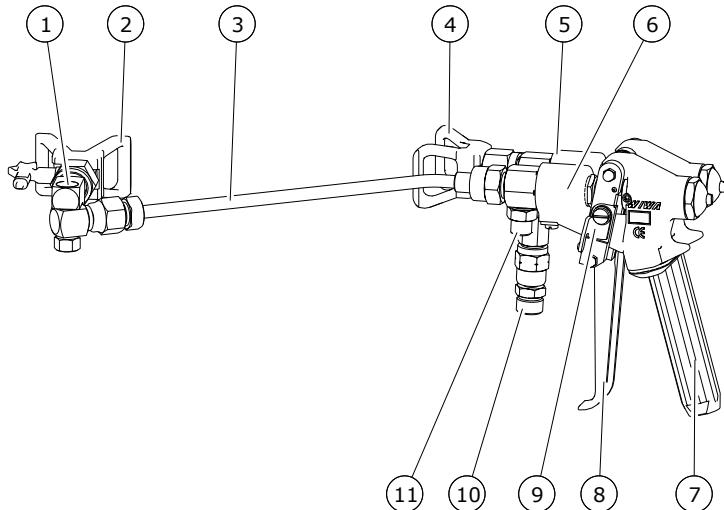**Variant with two-component external mixing****Fig. 6:** Model 500 FD with external mixing

No.	Designation
1	Swivel head
2	Nozzle protector for component B (accelerator)
3	Spray pipe for component B
4	Nozzle protector for component A
5	Gun body for component A
6	Gun body for component B
7	Gun handle
8	Four-finger trigger
9	Safety lever
10	Connection for the material hose of component A
11	Connection for the material hose of component B

Both spray guns are actuated and secured simultaneously. The respective material output quantity depends on the spray nozzle used.

### 3.5 Optional expansions and accessories

The following list contains just some of the most common accessories and expansions. The detailed accessory catalog can be found at [www.wiwa.de](http://www.wiwa.de). For further information and order numbers, you can also contact a **WIWA** dealer or **WIWA** customer service.

#### Standard nozzles


The standard nozzles can be used for all airless spray guns. They are manufactured out of high-quality carbide. The nozzle size conforms to the application of the spray gun. A tabular list of the nozzle sizes and applications can be found in the accessory catalogue.

#### Reversible nozzles

These nozzles are manufactured out of high-quality carbide and are suitable for all spray guns that are equipped with an appropriate nozzle protector and a reversing switch. The nozzle size conforms to the application of the spray gun.

#### Nozzle filter


(disc filter) with housing, prevents clogging of the spray nozzle.

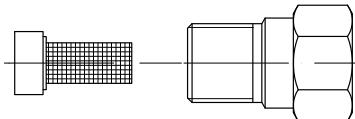

#### Push-in filter


Push-in filters (for FI models) prevent clogging of the spray nozzle. They have a greater filter surface than the nozzle filters.

Art. no.	Mesh size	Color
0638201	M 30	green
0414700	M 50	white
0646606	M 65	black
0467448	M 100	yellow
0638200	M 150	blue
0467456	M 200	red

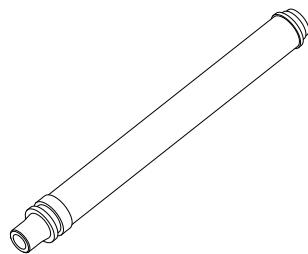


### Standard nozzle protector

The nozzle protector prevents damage to the spray nozzles (e.g. due to the spray gun falling down). Part of the scope of delivery for some models.

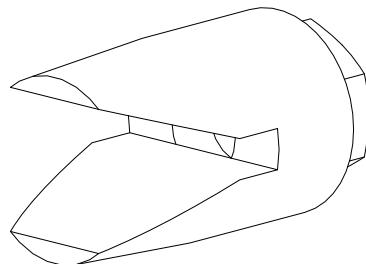


### Nozzle protector for reversible nozzles

This nozzle protector is used for accommodating the reversing switch with reversible nozzles. It is always to be installed in combination with the reversing switch. Part of the scope of delivery for some models.

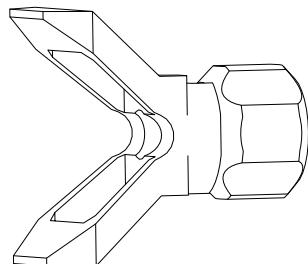

**Reversing switch**

The reversing switch is used for accommodating the reversible nozzle. Easy cleaning and flushing of the spray nozzles is possible by reversing the switch lever. The spray direction is in the direction of the arrow, opposite of flushing. Observe the separate instructions for the installation of the reversing switch.

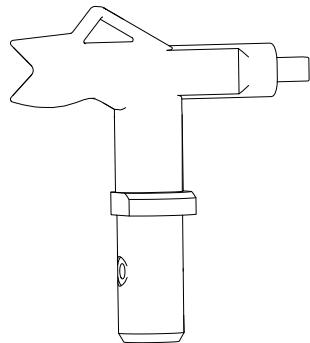

## 4 Transport and assembly

The spray gun left the factory in faultless condition, packaged correctly for transport.



Check the spray gun at the time of receipt for any transport damage and for completeness.

### 4.1 Scope of delivery

The spray gun is delivered with:

- ▶ a nozzle protector, which is already installed on the spray gun,
- ▶ the operation manual,
- ▶ a 2.5 mm hexagon socket wrench,
- ▶ an SW 12 / 14 / 17 / 19 / 22 / 24 combination wrench,
- ▶ a pull-off ring for the disassembly/assembly of the packing.

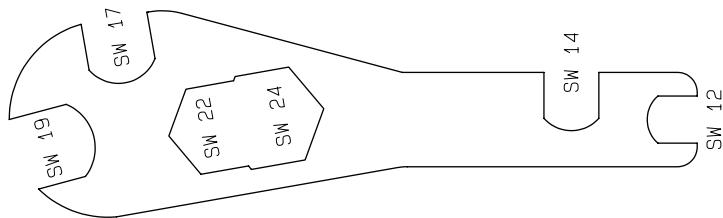


Fig. 7: Combination wrench

### 4.2 Assembly



Before connecting the spray gun to the spraying device, first install all accessory parts required for operation to the spray gun.

#### 4.2.1 Inserting the spray nozzle



The spray nozzle is not supplied as standard. Select a spray nozzle from our accessories catalogue that is suitable for the spray gun's area of application, the application material and the object to be coated.

1. Thoroughly flush the spray nozzle with a solvent.
2. Unscrew the sleeve nut (and optionally the nozzle protector) from the spray gun.
3. Remove the gasket from the sleeve nut.
4. Insert the spray nozzle exactly in the sleeve nut's recess.
5. Insert the gasket into the sleeve nut.
6. Screw the sleeve nut with the nozzle onto the spray gun hand tight.
7. Adjust the sleeve nut according to the desired spray pattern (horizontal or vertical):

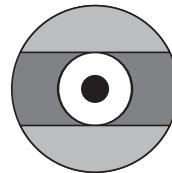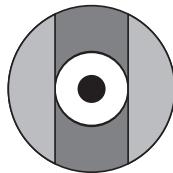

8. Tighten the sleeve nut with an open end spanner.


#### 4.2.2 Installing the push-in filter in the handle



The push-in filters are special accessories for FI models.

1. Unscrew the double nipple and the swivel joint from the gun handle, paying attention to the gasket while doing so.
2. Release the screw with which the securing bracket is fastened to the gun body.

3. Turn the securing bracket to the side.
4. Unscrew the gun handle, paying attention to the gasket while doing so.
5. Insert the push-in filter with the long end piece upward into the conical gasket of the gun body.

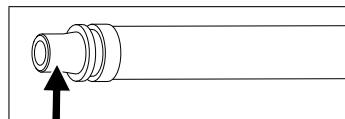

**Fig. 8:** Insert this end piece in the gasket

6. Install the gun handle, the securing bracket and the double nipple and swivel joint in reverse order.



Make sure the gaskets are seated correctly. Damaged gaskets must be replaced.

#### 4.2.3 Connecting the material hose

1. Make sure that the spraying device is de-pressurized and the spray gun is secured.
2. Screw tight the material hose with the union nut to the material outlet of the spraying device.
3. Screw tight the material hose with the union nut to the inlet thread of the spray gun. Hold the spray gun with an open end spanner so that the spray gun does not turn.



Assemble a material hose to the inlet thread of each component for the model 500 FD with external mixing. Pay attention to the correct component assignment.

The spray gun is now ready for operation.

## 5 Operation



Observe and follow the operation manual of the spraying device.

### 5.1 Putting the spray gun into operation

1. Make sure that the spraying device is ready for operation and that the compressed air regulator for flushing is completely throttled back if required.
2. Unlock the spray gun.
3. Adjust the air inlet pressure for the spray gun. The minimum air inlet pressure for the spray gun is 3.5 bar.
4. Set the spraying pressure on the spraying device.

#### 5.1.1 Setting the spraying pressure

Observe the following information when setting the spraying pressure:

- The optimum spraying pressure has been attained when an even application with fading edge zones is obtained.
- Only operate the spray gun with as much air pressure as required, in order to attain good atomization at the recommended spray distance of approx. 30–40 cm (12"–16").
- An overly high spraying pressure increases material consumption and paint mist.
- If the spraying pressure is too low, this leads to streaking and varying coating thickness.

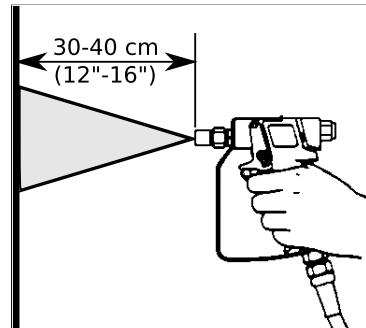


Fig. 9: Spray distance

### 5.1.2 Tips for good coatings

- ▶ Hold the spray gun at a right angle ( $90^\circ$ ) to the surface to be coated. As soon as you hold the spray gun at a different angle, the coating will become uneven and patchy (see Fig. 10).
- ▶ Ensure an even speed of the movement and guide the spray gun parallel to the coating surface. Weaving with the spray gun leads to an uneven coating (see Fig. 11).
- ▶ Move the spray gun with the arm and not with the wrist.
- ▶ Move the spray gun prior to activating the trigger. In this way you will achieve a faultless, soft and smooth overlapping of the spray jet and avoid an excessively thick material application at the start of the coating process.
- ▶ Release the trigger before stopping the movement.
- ▶ Change the spray nozzle before this becomes worn.



Worn nozzles lead to a high color consumption and adversely affect the quality of the color application.

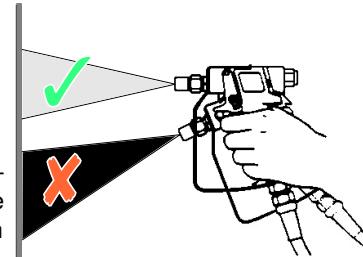


Fig. 10: Spray angle


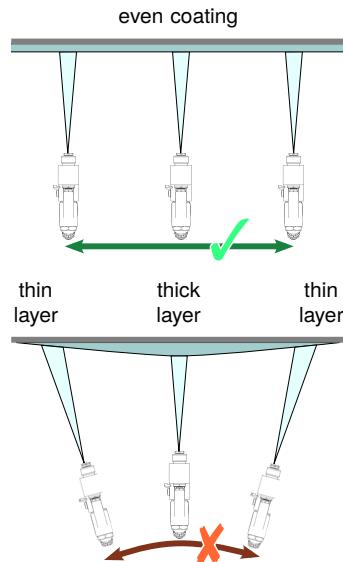


Fig. 11: Gun guidance

### 5.1.3 Tips for good coatings – with external mixing

- Set the reversing switch with the nozzle for component B so that the material hits component A at a right angle (see Fig. 12).

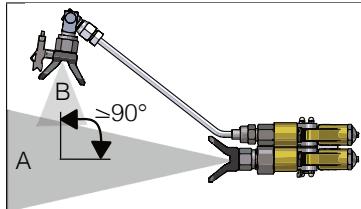

**Fig. 12:** Setting angle of nozzle for component B

## 5.2 Work interruption

1. Lock the spray gun.
2. Disassemble the nozzle protector and the nozzle.
3. Immerse the nozzle protector incl. nozzle in a container with a suitable cleaning agent. This will prevent the coating material from hardening in the nozzle opening and the nozzle from clogging.



When processing two-component materials or water-based coatings, the spray gun must be flushed together with the spraying device within the pot life specified by the material manufacturer.

4. Clean the spray gun externally at the end of work.

## 6 Maintenance

**WARNING**

If untrained personnel carry out maintenance or repair work, they endanger themselves and others, and risk the operational safety of the device.

- Maintenance or repair work on the spray gun may only be performed by WIWA customer service or personnel trained to do so.



Observe and follow the operation manual of the spraying device.

Prior to maintenance or repair work:

1. Flush the spray gun together with the spraying device (in particular when processing two component materials).
2. The spraying device pressure must be completely relieved.
3. Open the spray gun briefly once more to relieve the pressure.
4. Disassemble the spray gun from the spraying device.

**WARNING**

Despite relieving the pressure, residual pressures can still be present due to material congestion or clumping, which can suddenly escape during disassembly work and cause serious injuries.

- You must be particularly careful during disassembly work!
- When disassembling material hoses, cover the screw connection with a cloth in order to catch possible material sprays.

After completing maintenance or repair work, check that the spray gun is working properly.

## 6.1 Maintenance schedule

Time frame	Activity	for further reading
As needed	Lubricate spray gun	section 6.2 on page 35
	Set the play of the trigger	section 6.3 on page 35
At the end of work	Clean the push-in filter (if present)	section 6.4 on page 36

## 6.2 Lubricating the spray gun

The spray gun must be lubricated in order to maintain the ease of movement of all moving parts. Lubricate the joint of the trigger and the safety lever with one drop of oil as needed. Wipe off excess oil.

1. Remove the screw from the sealing cap.
2. Press the trigger up to the stop.
3. Put one drop of silicone-free oil (e.g. Mesamoll) into the opening of the sealing cap.
4. Let go of the trigger again.
5. Insert the screw back in the sealing cap.

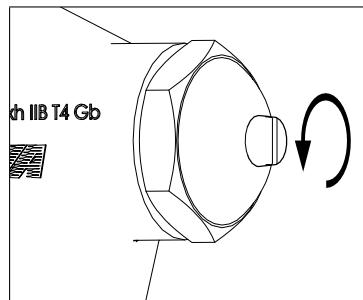


Fig. 13: Screw plug



Proceed very sparingly with oil while lubricating. Excess oil can drip down and influence the spray pattern. Wipe off excess oil.

## 6.3 Setting the play or grip width of the trigger

The trigger should have a play of 2-3 mm.

1. Insert the supplied hexagon socket wrench in one of the holes on the guide sleeve (see Fig. 14 on page 36).
2. Turn the guide sleeve until the threaded pin is positioned in the gap between the trigger and the gun body (see Fig. 15 on page 36).
3. Unscrew the threaded pin using the hexagon socket wrench one revolution.
4. Remove the sealing cap.
5. Place the hexagon socket wrench on the threaded pin behind the pressure springs.
6. Set the position of the guide sleeve and therefore the play of the trigger by turning the hexagon socket wrench.  
A noticeable play must exist on the trigger:
  - ▶ ⚡ Turn clockwise ⇒ play gets bigger,
  - ▶ ⚡ Turn counterclockwise ⇒ play gets smaller.

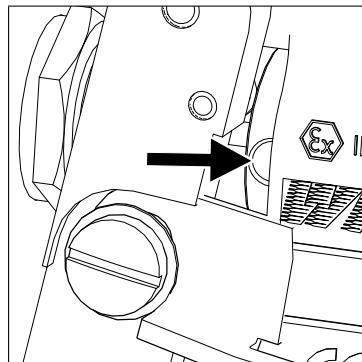


Fig. 14: Hole in the guide sleeve

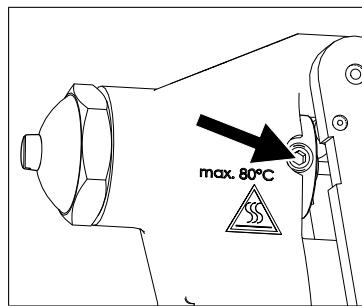


Fig. 15: Threaded pin


7. Screw tight the sealing cap again with the aid of the screw.
8. Tighten the threaded pin in the gap between the trigger and the gun body again using the hexagon socket wrench.

## 6.4 Cleaning the push-in filter



The push-in filters are special accessories for FI models.

1. Disassemble the material hose from the spray gun.
2. Unscrew the double nipple and the swivel joint from the gun handle, paying attention to the gasket while doing so.
3. Release the screw with which the securing bracket is fastened to the gun body.
4. Turn the securing bracket to the side.
5. Unscrew the gun handle, paying attention to the gasket while doing so.
6. Pull out the push-in filter downward.
7. Clean the push-in filter with a solvent recommended by the material manufacturer.
8. Insert the push-in filter with the long end piece upward into the conical gasket of the gun body:

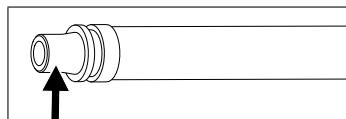


**Fig. 16:** Insert this end piece in the gasket

9. Install the gun handle, the securing bracket and the double nipple and swivel joint in reverse order.



Make sure the gaskets are seated correctly. Damaged gaskets must be replaced.

## 6.5 Replacing the packing and valve needle

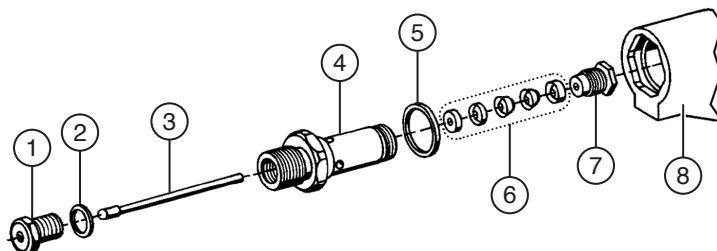

**Fig. 17:** Packing and valve needle

1. Unscrew the nozzle protector including spray nozzle and gasket from the spray gun (SW 22).
2. Hold the trigger completely depressed. Unscrew the valve seat including gasket.
3. Insert the supplied hexagon socket wrench in one of the holes on the guide sleeve (see Fig. 17 on page 38).
4. Turn the guide sleeve until the threaded pin is positioned at the recess of the gun body (see Fig. 17 on page 38).
5. Unscrew the threaded pin using the hexagon socket wrench one revolution.
6. Pull out the valve needle to the front using small pliers. The spherical head on the valve needle may not be damaged in the process.
7. Release the nut between the trigger and gun body. Hold the trigger depressed in order to have enough room to position the combination wrench.
8. Place the supplied pull-off ring on the insert and screw the nozzle protector (without nozzle) and the union nut tightly on it. The insert is pulled out while doing so.

No.	Description
1	Valve seat
2	Gasket
3	Valve needle
4	Insert
5	Gasket
6	Packing
7	Packing gland screw
8	Gun body

9. Remove the gasket that is now exposed. Unscrew the packing gland screw.
10. Remove the packing from the insert – possibly press it out from the opposite side using a mandrel, a screw or the like.
11. Clean all parts with the cleaning agent recommended by the material manufacturer.
12. Check the packing, the valve needle and the gaskets for wear.
13. Replace worn parts.


Assembly occurs in reverse order.



Pay attention to the correct position of the packings (V on the pressure side) and the needle (spherical head to the front).

1. Grease all parts sparingly with an acid-free oil or grease.
2. Slide the packing and the packing gland screw on the valve needle.
3. Insert the packing and socket in the gun body.
4. Pull the valve needle out again and screw on the packing gland screw hand tight.
5. Set a play of 2–3 mm on the trigger (see previous list from work step 4).
6. Tighten the packing gland screw (max. 1/4 revolution).
7. Check the spray gun for leak-tightness. In the event of leaks, relieve the spray gun pressure and tighten the packing gland screw 1/4 revolution again.

## 6.6 Cleaning the guide sleeve

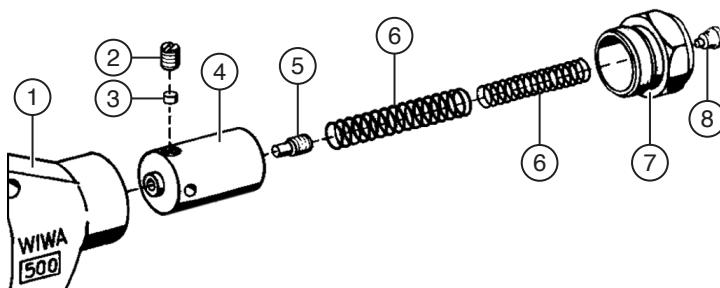

**Fig. 18:** Guide sleeve

1. Insert the supplied hexagon socket wrench in one of the holes on the guide sleeve (see Fig. 14 on page 36).
2. Turn the guide sleeve until the threaded pin is positioned at the recess of the gun body (see Fig. 15 on page 36).
3. Unscrew the threaded pin using the hexagon socket wrench one revolution.
4. Remove the screw from the screw plug.
5. Clamp the spray gun in a vice and release the screw plug (SW 24).
6. Remove the pressure springs from the guide sleeve.
7. Pull out the guide sleeve.
8. Grease the guide sleeve and the pressure spring(s) with acid and silicone-free grease.
9. Insert the guide sleeve back in the gun body.

No.	Description
1	Gun body
2	Threaded pin
3	Press-on plug
4	Guide sleeve
5	Shoulder screw
6	Pressure springs
7	Screw plug
8	Screw



The threaded part of the guide sleeve must be flush with the gun body.

10. Insert the pressure springs in the guide sleeve.
11. Wet the thread of the screw plug with weak thread locker (e.g. Loctite red) and screw the screw plug back tightly into the gun body.
12. Set a play of 2-3 mm on the trigger (see section 6.3 on page 35 from work step 4).
13. Tighten the packing gland screw (max. 1/4 revolution).
14. Check the spray gun for leak-tightness. In the event of leaks, relieve the spray gun pressure and tighten the packing gland screw 1/4 revolution again.
15. Tighten the threaded pin again using the hexagon socket wrench.

## 6.7 Replacing the gaskets on the gun handle

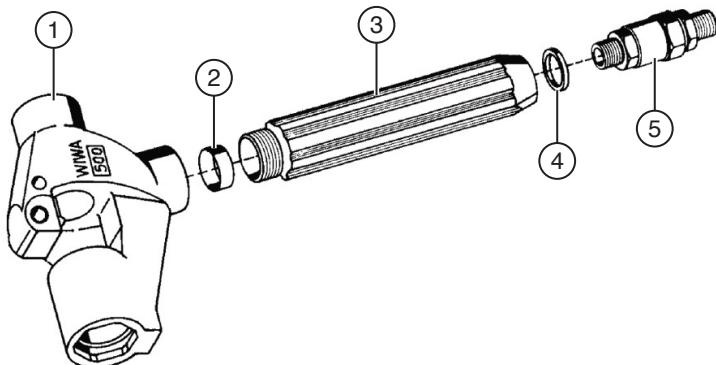


Fig. 19: Gaskets on the gun handle

1. Disassemble the material hose from the spray gun.
2. Unscrew the double nipple and the swivel joint from the gun handle, paying attention to the gasket while doing so.
3. Release the screw with which the securing bracket is fastened to the gun body.
4. Turn the securing bracket to the side.
5. Unscrew the gun handle, paying attention to the gasket while doing so.
6. Check both gaskets for damage.
7. Replace damaged gaskets.
8. Install the gun handle, the securing bracket and the double nipple and swivel joint in reverse order. Make sure the gaskets are seated correctly while doing so.

No.	Description
1	Gun body
2	Gasket
3	Handle
4	Gasket
5	Double nipple or swivel joint

## 7 Eliminating operational faults




Only eliminate operational faults if you are equipped with the prescribed personal protective equipment. Details on this can be found in section 2.4.4 on page 14.

fault	possible cause	remedy
Spray gun does not close correctly	Valve seat or valve needle defective	Replace packing and valve needle (see section 6.5 on page 38)
Spray gun is leaking at the packing gland screw	Packing not sufficiently prestressed	Tighten packing gland screw slightly
	Packing or valve needle defective	Replace packing and valve needle (see section 6.5 on page 38)
Trigger is stiff	Guide sleeve is sticky with hardened material	Clean guide sleeve (see section 6.6 on page 40)
	Packing or valve needle defective	Replace packing and valve needle (see section 6.5 on page 38)
Spray gun is leaking at the handle	Gasket between double nipple or swivel joint and handle defective	Replace gasket (see section 6.7 on page 41)
	Gasket between handle and gun body defective	Replace gasket (see section 6.7 on page 41)

## 8 Spare parts list

**Airless Spritzpistole**  
**Airless Spray Gun**  
**Pistolet sans air**  
WIWA 500

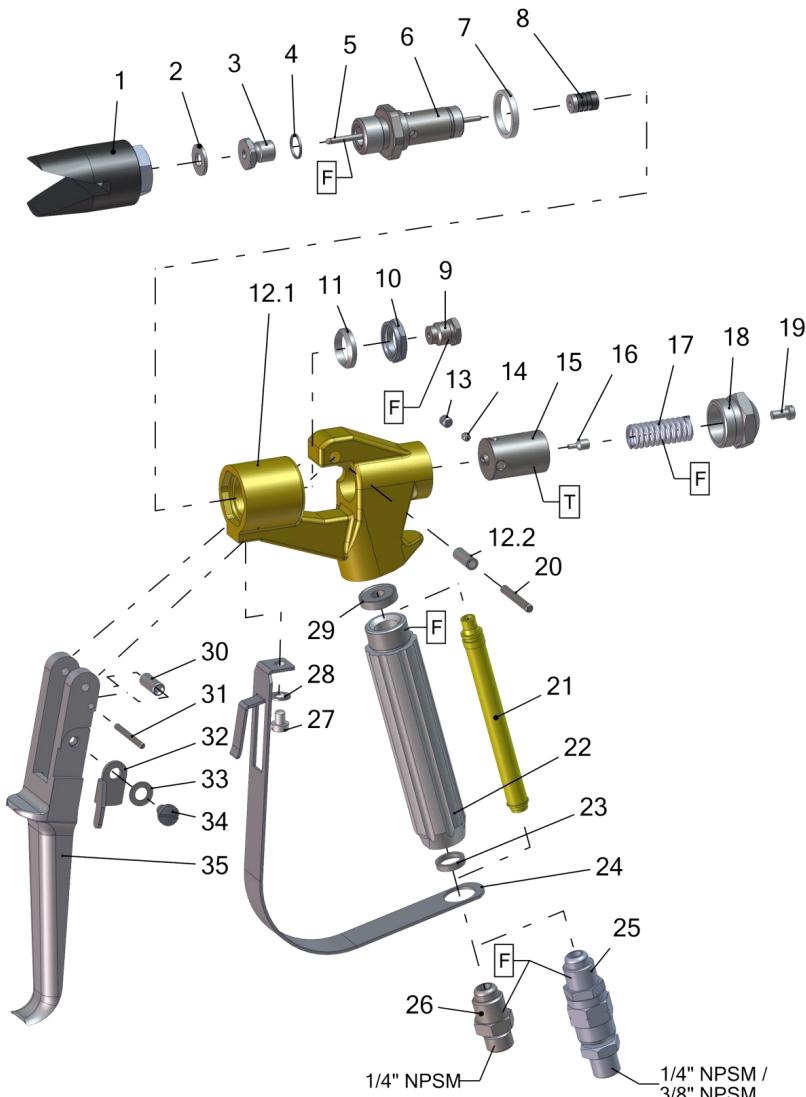 Serie • Serie • Série: 000  
 Datum • Date • Date: 26.10.2022


Pos.-Nr. in Klammern () sind keine Bestandteile dieser Baugruppe / items marked with () are not part of assembly shown / Les pièces entre parenthèses ne font pas partie du sous-groupe

Diese Zeichnung darf nicht kopiert, vervielfältigt oder dritten Personen zugänglich gemacht werden. Widerrechtliche Benutzung hat strafrechtliche Folgen. / This drawing should not be, in whole or in part, copied, distributed or used by or passed on as information to others for competition purposes or for whatever purposes without authorization. Unauthorized use is subject to prosecution.

Airless Spritzpistole  
Airless Spray Gun  
Pistolet sans air  
WIWA 500

Serie • Serie • Série: 000  
Datum • Date • Date: 26.10.2022



Your project deserves it.


Pos.	Number	Qty.	Version	V <sup>1</sup> /D <sup>2</sup> /R <sup>3</sup>	Artikel-bezeichnung	Part Description	Désignation des articles
1	0638632	1	A, D-G		Düsenschutz	tip guard	protection de buse
	0648808	1	J		Düsenschutz	tip guard	protection de buse
	0649328	1	I		Wendeschalter	reversible guard	inverseur de marche
	0649327	1	L		Wendeschalter	reversible guard	inverseur de marche
2	0218111	1	A, D-G, L	V, D, R	Dichtung	gasket	joint
3	0160989	1		V, R	Ventilsitz	valvle seat	siège
4	0217824	1		V, D, R	Dichtung	gasket	joint
5	0411299	1		V, R	Ventilnadel	valve needle	pointeau
6	0212474	1	A, C-H, L		Einsatz	insert	insert
	0644487	1	B, I-K		Einsatz	insert	insert
7	0217743	1		V, D, R	Dichtung	gasket	joint
8	0160997	1		V, D, R	Packung kpl.	packing set cpl.	joints cpl.
9	0213802	1			Stopfbuchsen-schraube	packing screw	boulon de serrage
10	0213810	1			Mutter	nut	écrou
11	0218081	1		V, D, R	Dichtung	gasket	joint
12	0163155	1			Pistolenkörper kpl.	gun body cpl.	corps de pistolet cpl.
12.1	0212660	1			Pistolenkörper	gun body	corps de pistolet
12.2	0213918	1			Buchse	bush	douille
13	0460702	1			Gewindestift	threaded pin	vis sans tête
14	0213853	1			Druckstopfen	pressure plug	coussin de pression
15	0213845	1			Führungshülse	guide sleeve	douille de guidage
16	0213942	1			Ansatzschraube	shoulder screw	boulon à embase
17	0671357	1		V	Druckfeder	spring	ressort
18	0212628	1			Verschlusschraube	closure screw	vis de feméture
19	0460257	1			Schraube	screw	Vis
20	0218413	1			Achse	axle	axe
21*	0467448	1	D, F, K, L	V	Einsteckfilter	gun filter	filtre de pistolet
22	0218243	1			Griff	handle	poignée
23	0217948	1		V, D, R	Dichtring	gasket	joint
24	0414549	1			Sicherungsbügel	trigger guard	surété de gachette
25	0065013	1	A		Drehgelenk	swivel	raccord tournant
	0064955	1	F-L		Drehgelenk	swivel	raccord tournant
26	0218405	1	B-E		Doppelnippel	male adaptor	raccord double male
27	0460222	1			Schraube	Screw	vis
28	0460230	1			U-Scheibe	washer	rondelle
29	0218251	1		V, D, R	Dichtung	gasket	joint
30	0499137	1			Rolle	pressure roll	rouleau
31	0499129	1			Achse	axle	axe

Airless Spritzpistole  
Airless Spray Gun  
Pistolet sans air  
WIWA 500

Serie • Serie • Série: 000  
Datum • Date • Date: 26.10.2022

  
Your project deserves it.

<b>32</b>	0414581	1			Sicherungshebel	safety lever	verouillage
<b>33</b>	0460346	1			Federscheibe	spring washer	rondelle
<b>34</b>	0412325	1			Ansatzschraube	shoulder screw	boulon `embase
<b>35</b>	0213896	1			Abzugshebel	trigger lever	gachette

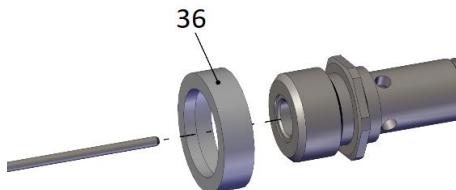

## Werkzeuge / tools / outils

Pos.	Number	Qty.	Version	$V^1/D^2/R^3$	Artikelbezeichnung	Part Description	Désignation des articles
<b>36</b>	0213837	1	A, C-H, L		Abziehring	extraction ring	douille arrache-boulons
	0653938	1	B, I-K		Abziehring	extraction ring	douille arrache-boulons
	0411035	1			Innensechskantschlüssel	allen-key	clé à six-pannes
	0411094	1			Kombischlüssel	wrench	clé

## ohne Abbildung - not illustrated - sans illustration

Number	Qty.	$V^1/D^2/R^3$	Artikelbezeichnung	Part Description	Désignation des articles
0063983		R	Dichtungssatz	seal kit	jeu de joints
0064076			Reparatursatz	repair kit	jeu de réparation

## \*Filttereinsätze / filter insert / filtre seuls

Number	Qty.	$V^1/D^2/R^3$	Artikelbezeichnung	Part Description	Désignation des articles
0638201	1	V	M 30 grün	M 30 green	M 30 vert
0414700	1	V	M 50 weiß	M 50 white	M 50 blanc
0646606	1	V	M 65 schwarz	M 65 black	M 65 noir
0647448	1	V	M 100 gelb (Standard)	M 100 yellow	M 100 jaune
0638200	1	V	M 150 blau	M 150 blue	M 150 bleu
0467456	1	V	M 200 rot	M 200 red	M 200 rouge

<sup>1</sup>V = Verschleißteile • Wear parts • Pièces d'usure usuelles

<sup>2</sup>D = Teile des Dichtungssatzes • Parts of seal kit • Pièces de kit de joints

<sup>3</sup>R = Teile des Reparatursatzes • Parts of repair kit • Pièces de kit de réparation

Airless Spritzpistole  
Airless Spray Gun  
Pistolet sans air  
WIWA 500

Serie • Serie • Série: 000  
Datum • Date • Date: 26.10.2022



Your project deserves it.

Version	Number	Connection	11/16 -16 UNS	7/8-14 UNF	Swivel (-D-)	Gun filter
A	0015040	3/8" NPSM	x		x	
B	0648246	1/4" NPSM		x		
C	0662604	1/4" NPSM	x			
D	0015091	1/4" NPSM	x			x
E	0011479	1/4" NPSM	x			
F	0015105	1/4" NPSM	x		x	x
G	0015016	1/4" NPSM	x		x	
H	0662603	1/4" NPSM	x		x	
I	0643409	1/4" NPSM		x	x	
J	0657985	1/4" NPSM		x	x	
K	0646452	1/4" NPSM		x	x	x
L	0672410	1/4" NPSM	x		x	x

#### Sicherungsmittel / Thread sealant / produit d'étanchéité

Symbol / Symbol / Symbole	Beschreibung / Description / Description	Artikel / Bestell-Nr. Article / Order-No. L'article / Référence
[a]	schwach / light / leger	222 / 0000016
[b]	mittel / medium / léger	243 / 0000015
[schw.]	mittel, Kunststoff-Stahl / medium, plastic-steel / medium, plastique-acier (20ml)	480 / 0000107
[g]	hochfest / high-streng / hautesistance (50ml) hochfest für Cr/Ni-Teile / for Cr/Ni steel parts / pour parties fabriqué de Cr/Ni (50ml)	601 / 0000014 2701 / 0000303
[p]	Rohrdichtungspaste / pipe sealant / pâte d'étanchéité pour tuyaux(50ml)	225 / 0000017
[a]	Aktivator / activator / activateur (500ml) Aktivator für Kunststoffteile / activator for plastic parts / activateur pour pièces de plastique (10ml)	734 / 0000018 770 / 0000108
[t]	Gewindestreifen / threaded tape / ruban de filetage	/0000099
[k]	2K - Kleber / 2K - adhesive / 2K - adhésif	/0000414


#### Betriebsmittel / Machinery materials / Equipement de production

Symbol / Symbol / Symbole	Beschreibung / Description / Description	Artikel / Bestell-Nr. Article / Order-No. L'article / Référence
[F]	Fett, säurefrei / acid-free /sans acide	0000025
[T]	Trennmittel / release agent / agent séparateur bei Verarbeitung von Isozyanate / for application with isozyanate / pour l'application de l'isozyanate	0163333 0640651
[M]	Montagepaste (für R- und RS- Ausführung) / assembly paste (for version R or RS) / pâte d'assemblage (de version R et RS)	0000233
[MS]	Montagespray (für R- und RS- Ausführung) / assembly spray (for version R or RS) / aérosol d'assemblage (de version R et RS)	0000118
[MT]	Montagepaste (für hohe Temperaturen) assembly paste (for high temperatures) d'assemblage (pour hautes températures)	0000057

Airless Spritzpistole  
Airless Spray Gun  
Pistolet sans air  
WIWA 500 -F-

Serie • Serie • Série: 000  
Datum • Date • Date: 07.01.2025

WIWA®  
Your project deserves it.

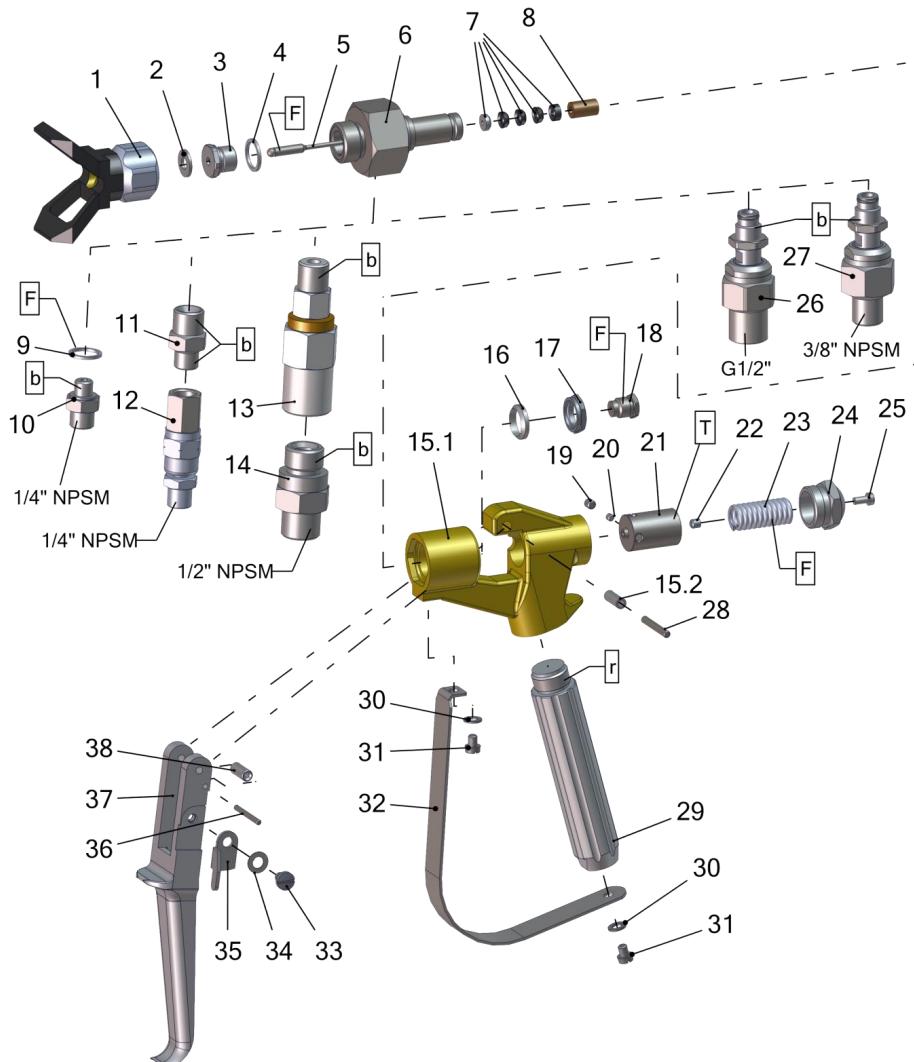

Pos.-Nr. in Klammern () sind keine Bestandteile dieser Baugruppe / items marked with () are not part of assembly shown / Les pièces entre parenthèses ne font pas partie du sous-groupe

Diese Zeichnung darf nicht kopiert, vervielfältigt oder dritten Personen zugänglich gemacht werden. Widerrechtliche Benutzung hat strafrechtliche Folgen. / This drawing should not be, in whole or in part, copied, distributed or used by or passed on as information to others for competition purposes or for whatever purposes without authorization. Unauthorized use is subject to prosecution.

Airless Spritzpistole  
Airless Spray Gun  
Pistolet sans air  
WIWA 500 -F-

Serie • Serie • Série: 000  
Datum • Date • Date: 07.01.2025

  
 Your project deserves it.

Pos.	Number	Qty.	Version	V <sup>1</sup> /D <sup>2</sup> /R <sup>3</sup>	Artikel-bezeichnung	Part Description	Désignation des articles
1	0638632	1	A, E		Düsenschutz	tip guard	protection de buse
	0648808	1	C, D, F-K		Düsenschutz	tip guard	protection de buse
	0649328	1	C, D, F-K		Wendeschalter	reversible guard	inverseur de marche
2	0218111	1	A, E	V, D, R	Dichtung	gasket	joint
3	0160989	1	A-E, H, J, L	V, R	Ventilsitz	valvle seat	siége
	0658715	1	F, G, I, K	V, R	Ventilsitz	valvle seat	siége
4	0217824	1	A-E, H, J, L	V, D, R	Dichtung	gasket	joint
	0659968	1	F, G, I, K	V, D, R	Dichtung	gasket	joint
5	0413437	1	A-E, H, J, L	V, R	Ventilnadel	valve needle	pointeau
	0658712	1	F, G, I, K	V, R	Ventilnadel	valve needle	pointeau
6	0218812	1	A, B		Einsatz	insert	insert
	0643410	1	C, L		Einsatz	insert	insert
	0647351	1	D		Einsatz	insert	insert
	0644975	1	E		Einsatz	insert	insert
	0658711	1	F, G		Einsatz	insert	insert
	0672551	1	H, J		Einsatz	insert	insert
	0672552	1	I, K		Einsatz	insert	insert
7	0160997	1		V, D, R	Packung kpl.	packing set cpl.	joints cpl.
8	0220302	1	A - C, L		Distanzhülse	spacer sleeve	doille
	0644976	1	D - K		Distanzhülse	spacer sleeve	doille
9	0217824	1	A - C, L	V, D, R	Dichtung	gasket	joint
10	0218820	1	A - C		Doppelnippel	male adaptor	raccord double male
11	0484989	1	F, L		Doppelnippel	male adaptor	raccord double male
12	0061042	1	F, L		Drehgelenk	swivel	raccord tournant
13	0647592	1	D, E, G		Drehgelenk	swivel	raccord tournant
14	0644948	1	D, E, G		Doppelnippel	male adaptor	raccord double male
15	0614882	1			Pistolenkörper kpl.	gun body cpl.	corps de pistolet cpl.
15.1	0222402	1			Pistolenkörper	gun body	corps de pistolet
15.2	0213918	1			Buchse	bush	douille
16	0218081	1		V, D, R	Dichtung	gasket	joint
17	0213810	1			Mutter	nut	écrou
18	0213802	1			Stopfbuchsen-schraube	packing screw	boulon de serrage
19	0460702	1	A-E, H, J, L		Gewindestift	threaded pin	vis sans tête
	0671810	1	F, G, I, K				

Airless Spritzpistole  
Airless Spray Gun  
Pistolet sans air  
WIWA 500 -F-

Serie • Serie • Série: 000  
Datum • Date • Date: 07.01.2025

  
Your project deserves it.

<b>20</b>	0213853	1	A-E, H, J, L		Druckstopfen	pressure plug	coussin de pression
<b>21</b>	0213845	1	A-E, H, J, L		Führungshülse	guide sleeve	douille de guidage
	0658750	1	F, G, I, K		Führungshülse	guide sleeve	douille de guidage
<b>22</b>	0213942	1			Ansatzschraube	shoulder screw	boulon à embase
<b>23</b>	0671357	1	A-E, H, J, L	V	Druckfeder	spring	ressort
	0658789	1	F, G, I, K	V	Druckfeder	spring	ressort
<b>24</b>	0212628	1	A-E, H, J, L		Verschlusschraube	closure screw	vis de feméture
	0658751	1	F, G, I, K		Verschlusschraube	closure screw	vis de feméture
<b>25</b>	0460257	1			Schraube	screw	vis
<b>26</b>	0671390	1	H, I		Drehgelenk	swivel	raccord tournant
<b>27</b>	0672747	1	J, K		Drehgelenk	swivel	raccord tournant
<b>28</b>	0218413	1			Achse	axle	axe
<b>29</b>	0219819	1			Griff	handle	poignée
<b>30</b>	0460230	2	A - C, L		U-Scheibe	washer	rondelle
<b>31</b>	0460222	2	A - C, L		Schraube	Screw	vis
<b>32</b>	0630872	1	A - C, L		Sicherungsbügel	trigger guard	surête de gachette
<b>33</b>	0412325	1			Ansatzschraube	shoulder screw	boulon `embase
<b>34</b>	0460346	1			Federscheibe	spring washer	rondelle
<b>35</b>	0414581	1			Sicherungshebel	safety lever	verouillage
<b>36</b>	0499129	1			Achse	axle	axe
<b>37</b>	0213896	1			Abzugshebel	trigger lever	gachette
<b>38</b>	0499137	1			Rolle	pressure roll	rouleau

## Werkzeuge / tools / outils

Number	Qty.	V <sup>1</sup> /D <sup>2</sup> /R <sup>3</sup>	Artikelbezeichnung	Part Description	Désignation des articles
0411035	1		Innensechskantschlüssel	allen-key	clé à six-pannes
0411094	1		Kombischlüssel	wrench	clé

## ohne Abbildung - not illustrated - sans illustration

Number	Qty.	Version	V <sup>1</sup> /D <sup>2</sup> /R <sup>3</sup>	Artikelbezeichnung	Part Description	Désignation des articles
0062111		A - C	R	Dichtungssatz	seal kit	jeu de joints
0064084		A - C		Reparatursatz	repair kit	jeu de réparation
0646107		D, E, H, J	R	Dichtungssatz	seal kit	jeu de joints
0646108		D, E, H, J		Reparatursatz	repair kit	jeu de réparation
0661099		F, G, I, K	R	Dichtungssatz	seal kit	jeu de joints
0661100		F, G, I, K		Reparatursatz	repair kit	jeu de réparation

<sup>1</sup>V = Verschleißteile • Wear parts • Pièces d'usure usuelles

<sup>2</sup>D = Teile des Dichtungssatzes • Parts of seal kit • Pièces de kit de joints

<sup>3</sup>R = Teile des Reparatursatzes • Parts of repair kit • Pièces de kit de reparation

Airless Spritzpistole  
Airless Spray Gun  
Pistolet sans air  
WIWA 500 -F-

Serie • Serie • Série: 000  
Datum • Date • Date: 07.01.2025

  
 Your project deserves it.

Version	Number	Connection	11/16 -16 UNS	7/8-14 UNF	Swivel	Valve needle
A	0012092	1/4" NPSM	x			3mm
B	0662602	1/4" NPSM	x			3mm
C	0643411	1/4" NPSM		x		3mm
D	0647352	1/2" NPSM		x	x	3mm
E	0644977	1/2" NPSM	x		x	3mm
F	0669799	1/4" NPSM		x	x	5mm
G	0658752	1/2" NPSM		x	x	5mm
H	0672553	G 1/2"		x	x	3mm
I	0672554	G1/2"		x	x	5mm
J	0672749	3/8" NPSM		x	x	3mm
K	0672748	3/8" NPSM		x	x	5mm
L	0673501	1/4" NPSM		x	x	3mm

## Sicherungsmittel / Thread sealant / produit d'étanchéité

Symbol / Symbol / Symbol	Beschreibung / Description / Description	Artikel / Bestell-Nr. Article / Order-No. L'article / Référence
[r]	schwach / light / léger	222 / 0000016
[b]	mittel / medium / léger	243 / 0000015
[schw.]	mittel, Kunststoff-Stahl / medium, plastic-steel / medium, plastique-acier (20ml)	480 / 0000107
[g]	hochfest / high-streng / hautesistance (50ml) hochfest für Cr/Ni-Teile / for Cr/Ni steel parts / pour parties fabriqué de Cr/Ni (50ml)	601 / 0000014 2701 / 0000303
[p]	Rohrdichtungspaste / pipe sealant / pâte d'étanchéité pour tuyaux(50ml)	225 / 0000017
[a]	Aktivator / activator / activateur (500ml) Aktivator für Kunststoffteile / activator for plastic parts / activateur pour pièces de plastique (10ml)	734 / 0000018 770 / 0000108
[t]	Gewindestreifen / threaded tape / ruban de filetage	/0000099
[k]	2K - Kleber / 2K - adhesive / 2K - adhésif	/0000414


## Betriebsmittel / Machinery materials / Équipement de production

Symbol / Symbol / Symbol	Beschreibung / Description / Description	Artikel / Bestell-Nr. Article / Order-No. L'article / Référence
[F]	Fett, säurefrei / acid-free /sans acide	0000025
[T]	Trennmittel / release agent / agent séparateur bei Verarbeitung von Isoyanate / for application with isoyanate / pour l'application de l'isoxytanate	0163333 0640651
[M]	Montagepaste (für R- und RS- Ausführung) / assembly paste (for version R or RS) / pâte d'assemblage (de version R et RS)	0000233
[MS]	Montagespray (für R- und RS- Ausführung) / assembly spray (for version R or RS) / aérosol d'assemblage (de version R et RS)	0000118
[MT]	Montagepaste (für hohe Temperaturen) assembly paste (for high temperatures) d'assemblage (pour hautes températures)	0000057

Airless Pistole  
Airless gun  
Pistolet sans air  
WIWA 500 -F-

Bestell-Nr. • Order-No. • Référence: 0654218  
Serie • Serie • Série: 001  
Datum • Date • Date: 03.03.2022

WIWA®  
Your project deserves it.

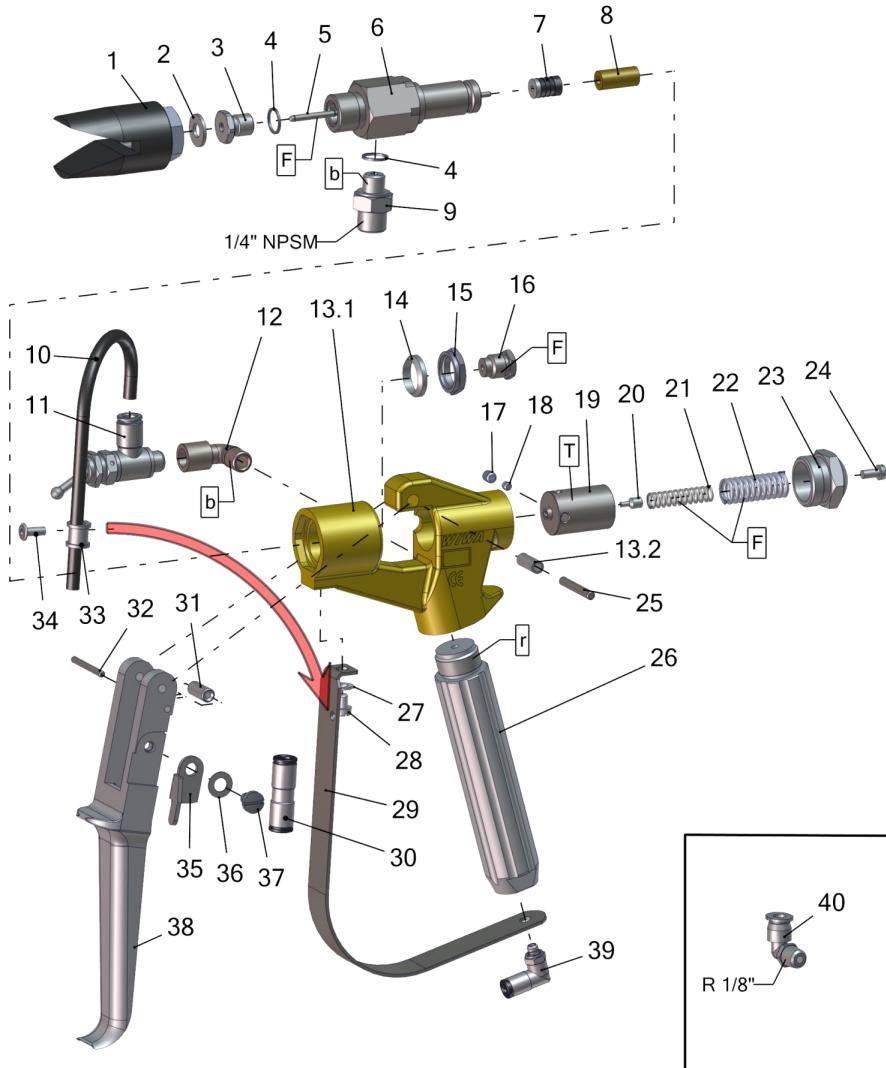

Pos.-Nr. in Klammern () sind keine Bestandteile dieser Baugruppe / items marked with () are not part of assembly shown / Les pièces entre parenthèses ne font pas partie du sous-groupe

Diese Zeichnung darf nicht kopiert, vervielfältigt oder dritten Personen zugänglich gemacht werden. Widerrechtliche Benutzung hat strafrechtliche Folgen. / This drawing should not be, in whole or in part, copied, distributed or used by or passed on as information to others for competition purposes or for whatever purposes without authorization. Unauthorized use is subject to prosecution.

## Spare parts list



Airless Pistole  
Airless gun  
Pistolet sans air  
WIWA 500 -F-

Bestell-Nr. • Order-No. • Référence: 0654218  
Serie • Serie • Série: 001  
Datum • Date • Date: 03.03.2022



Your project deserves it.

Pos.	Number	Qty.	Lenght	V¹/D²/R³	Artikelbezeichnung	Part Description	Désignation des articles
1	0638632	1			Düsenschutz	tip guard	protection de buse
2	0218111	1		V, D, R	Dichtung	gasket	joint
3	0160989	1		V, R	Ventilsitz	valve seat	siège de soupape
4	0217824	2		V, D, R	Dichtung	gasket	joint
5	0413437	1		V, R	Ventilnadel	valve needle	pointeau
6	0218812	1			Einsatz	insert	insertion
7	0160997	1		V, D, R	Packung kpl.	packing set cpl.	joints cpl.
8	0220302	1			Distanzhülse	spacer sleeve	douille
9	0218820	1			Doppelnippel	male adaptor	raccord double male
10	0665931	1	0,15m	V	Druckluftschlauch	compressed air hose	flexible d'air comprimé
11	0654196	1		V	Pneumatikventil	pneumatic valve	soupape pneumatique
12	0655844	1			Winkel	elbow	coude
13.1	0654219	1			Pistolenkörper	gun body	corps de pistolet
13.2	0213918	1			Buchse	bush	douille
14	0218081	1		V, D, R	Dichtung	gasket	joint
15	0213810	1			Mutter	nut	écrou
16	0213802	1			Stopfbuchsenschraube	gland nut	bouchon
17	0460702	1			Gewindestift	threaded pin	vis sans tête
18	0213853	1			Druckstopfen	pressure plug	bouchon de pression
19	0213845	1			Führungs hülse	guid sleeve	douille de guidage
20	0213942	1			Gewindestift	threaded pin	vis sans tête
21	0412066	1		V	Druckfeder	spring	ressort
22	0411876	1		V	Druckfeder	spring	ressort
23	0212628	1			Verschlußschraube	screw plug	vis de fermeture
24	0460257	1			Schraube	screw	vis
25	0218413	1			Achse	axle	axe
26	0654220	1			Griff	handle	poignée
27	0460230	1			Scheibe	washer	rondelle
28	0460222	1			Schraube	screw	vis
29	0654222	1			Sicherheitsbügel	trigger guard	secreté de gachette
30	0665930	1			Steckverbindung	push in connector	connecteur
31	0499137	1			Rolle	roller	poulie
32	0499129	1			Achse	axle	axe
33	0648815	1			Rohrschelle	pipe clip	bride pour tube
34	0663445	1			Blindniete	blind rivet	rivet aveugle
35	0414581	1			Sicherungshebel	safety lever	verouillage
36	0460346	1			Federscheibe	spring washer	rondelle élastique
37	0412325	1			Schraube	screw	vis
38	0213896	1			Abzugshobel	trigger	gâchette
39	0665944	1			L-Steckverschraubung	L-plug-in connector	L-vissage à air comprimé
40	0634730	1			L-Steckverschraubung	L-plug-in connector	L-vissage à air comprimé

### Montagewerkzeug - mounting tool - outil de montage

Number	Qty.	V¹/D²/R³	Artikelbezeichnung	Part Description	Désignation des articles
0411035	1		Innensechskantschlüssel	allen-key	clé à six pans
0411094	1		Kombischlüssel	wrench	clé

Airless Pistole  
Airless gun  
Pistolet sans air  
WIWA 500 -F-

Bestell-Nr. • Order-No. • Référence: 0654218  
Serie • Serie • Série: 001  
Datum • Date • Date: 03.03.2022

  
Your project deserves it.

**ohne Abbildung - not illustrated - sans illustration**

Number	Qty.	V <sup>1</sup> /D <sup>2</sup> /R <sup>3</sup>	Artikelbezeichnung	Part Description	Désignation des articles
0064084	1		Reparatursatz	repair kit	jeu de réparation
0062111	1	R	Dichtungssatz	seal kit	jeu de joints

<sup>1</sup>V = Verschleißteile • Wear parts • Pièces d'usure usuelles

<sup>2</sup>D = Teile des Dichtungssatzes • Parts of seal kit • Pièces de kit de joints

<sup>3</sup>R = Teile des Reparatursatzes • Parts of repair kit • Pièces de kit de réparation

**Sicherungsmittel / Thread sealant / produit d'étanchéité**

Symbol / Symbol / Symbole	Beschreibung / Description / Description	Artikel / Bestell-Nr. Article / Order-No. L'article / Réference
[L]	schwach / light / leger	222 / 0000016
[M]	mittel / medium / moyen	243 / 0000015
[schw]	mittel, Kunststoff-Stahl / medium, plastic-steel / medium, plastique-acier (20ml)	480 / 0000107
[H]	hochfest / high-strength / haute résistance (50ml) hochfest für Cr/Ni-Teile / for Cr/Ni steel parts / pour parties fabriqué de Cr/Ni (50ml)	601 / 0000014 2701 / 0000303
[D]	Rohrdichtungspaste / pipe sealant / pâte d'étanchéité pour tuyaux (50ml)	225 / 0000017
[A]	Aktivator / activator / activateur (500ml) Aktivator für Kunststoffteile / activator for plastic parts / activateur pour pièces de plastique (10ml)	734 / 0000018 770 / 0000108
[T]	Gewindegband / threaded tape / ruban de filetage	/0000099
[K]	2K - Kleber / 2K - adhesive / 2K - adhésif	/0000414


**Betriebsmittel / Machinery materials / Equipement de production**

Symbol / Symbol / Symbole	Beschreibung / Description / Description	Artikel / Bestell-Nr. Article / Order-No. L'article / Réference
[E]	Fett, säurefrei / acid-free / sans acide	0000025
[T]	Trennmittel / release agent / agent séparateur bei Verarbeitung von Isoyanate / for application with isoynate / pour l'application de l'isoynate	0163333 0640651
[M]	Montagepaste (für R- und RS-Ausführung) / assembly paste (for version R or RS) / pâte d'assemblage (de version R et RS)	0000233
[MS]	Montagespray (für R- und RS-Ausführung) / assembly spray (for version R or RS) / aérosol d'assemblage (de version R et RS)	0000118

Airless Spritzpistole  
Airless Spray Gun  
Pistolet sans air  
WIWA 500 -F-

Bestell-Nr. • Order-No. • Référence: 0657415  
Serie • Serie • Série: 000  
Datum • Date • Date: 03.03.2022

**WIWA**®  
Your project deserves it.

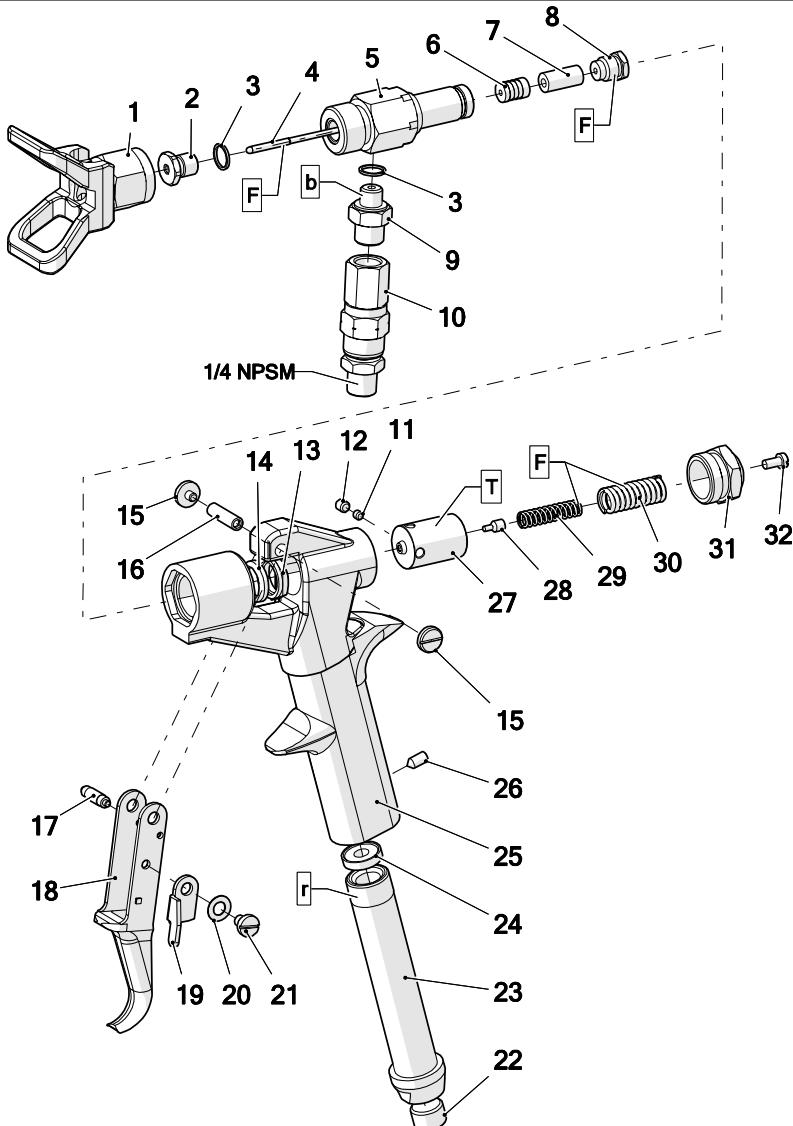

Diese Zeichnung darf nicht kopiert, vervielfältigt oder dritten Personen zugänglich gemacht werden. Widerrechtliche Benutzung hat strafrechtliche Folgen. / This drawing should not be, in whole or in part, copied, distributed or used by or passed on as information to others for competition purposes or for whatever purposes without authorization. Unauthorized use is subject to prosecution.

Airless Spritzpistole  
Airless Spray Gun  
Pistolet sans air  
WIWA 500 -F-

Bestell-Nr. • Order-No. • Référence: 0657415  
Serie • Serie • Série: 000  
Datum • Date • Date: 03.03.2022

  
Your project deserves it.

Pos.	Number	Qty.	V <sup>1</sup> /D <sup>2</sup> /R <sup>3</sup>	Artikelbezeichnung	Part Description	Désignation des articles
1	0649328	1		Wendeschalter	reversible guard	inverseur de marche
2	0160989	1	V, R	Ventilsitz	valve seat	siège de soupape
3	0217824	2	D, R	Dichtung	gasket	joint
4	0413437	1	V, R	Ventilnadel	valve needle	pointeau
5	0643410	1		Einsatz	insert	insertion
6	0160997	1	V, D, R	Packung kpl.	packing cpl.	joint cpl.
7	0220302	1		Distanzhülse	spacer sleeve	douille
8	0213802	1		Stopfbuchsenschraube	gland nut	bouchon
9	0218820	1		Doppelnippel	male adaptor	raccord double male
10	0061042	1		Drehgelenk	swivel	pivot
11	0213853	1		Druckstopfen	pressure plug	bouchon de pression
12	0460702	1		Gewindestift	threaded pin	vis sans tête
13	0213810	1		Mutter	nut	écrou
14	0218081	1	D, R	Dichtung	gasket	joint
15	0460354	2		Schraube	screw	vis
16	0216208	1		Zwischenstück	intermediate piece	pièce intermédiaire
17	0489034	1		Rolle	roller	poulie
18	0489042	1		Abzughebel	trigger	gâchette
19	0414581	1		Sicherungshebel	safety lever	verouillage
20	0460346	1		Federscheibe	spring washer	disque de ressort
21	0412325	1		Schraube	screw	vis
22	0221465	1		Gewindestopfen	threaded plug	bouchon fileté
23	0632558	1		Hülse	sleeve	douille
24	0218251	1	V	Dichtung	gasket	joint
25	0410934	1		Griff	handle	manette
26	0460885	1		Gewindestift	threaded pin	vis sans tête
27	0213845	1		Führungshülse	guid sleeve	douille de guidage
28	0213942	1		Gewindestift	threaded pin	vis sans tête
29	0412066	1	V	Druckfeder	spring	ressort
30	0411876	1	V	Druckfeder	spring	ressort
31	0212628	1		Verschlußschraube	screw plug	vis de fermeture
32	0460257	1		Schraube	screw	vis

ohne Abbildung - not illustrated - sans illustration

Number	Qty.	V <sup>1</sup> /D <sup>2</sup> /R <sup>3</sup>	Artikelbezeichnung	Part Description	Désignation des articles
0064084	1		Reparatursatz	repair kit	jeu de réparation
0062111	1	R	Dichtungssatz	seal kit	jeu de joints

<sup>1</sup>V = Verschleißteile • Wear parts • Pièces d'usure usuelles

<sup>2</sup>D = Teile des Dichtungssatzes • Parts of seal kit • Pièces de kit de joints

<sup>3</sup>R = Teile des Reparatursatzes • Parts of repair kit • Pièces de kit de réparation

**Airless Spritzpistole**  
**Airless Spray Gun**  
**Pistolet sans air**  
**WIWA 500 -F-**

Bestell-Nr. • Order-No. • Référence: **0657415**  
 Serie • Serie • Série: **000**  
 Datum • Date • Date: **03.03.2022**

Your project deserves it.

## Sicherungsmittel / Thread sealant / produit d'étanchéité

Symbol / Symbol / Symbole	Beschreibung / Description / Description	Artikel / Bestell-Nr. Article / Order-No. L'article / Référence
[r]	schwach / light / léger	222 / 0000016
[b]	mittel / medium / moyen	243 / 0000015
[schw.]	mittel, Kunststoff-Stahl / medium, plastic-steel / medium, matière plastique-acier (20ml)	480 / 0000107
[g]	hochfest / high-strength / haute résistance (50ml) hochfest für Cr/Ni-Teile / for Cr/Ni steel parts / pour parties fabriquées en Cr/Ni (50ml)	601 / 0000014 2701 / 0000303
[p]	Rohrdichtungspaste / pipe sealant / pâte d'étanchéité pour tuyaux(50ml)	225 / 0000017
[a]	Aktivator / activator / activateur (500ml) Aktivator für Kunststoffteile / activator for plastic parts / activateur pour pièces de plastique (10ml)	734 / 0000018 770 / 0000108
[t]	Gewindeband / threaded tape / ruban de filetage	/0000099
[k]	2K - Kleber / 2K - adhesive / 2K - adhésif	/0000414

## Betriebsmittel / Machinery materials / Equipement de production

Symbol / Symbol / Symbole	Beschreibung / Description / Description	Artikel / Bestell-Nr. Article / Order-No. L'article / Référence
[E]	Fett, säurefrei / acid-free /sans acide	0000025
[T]	Trennmittel / release agent / agent séparateur bei Verarbeitung von Isocyanate / for application with isocyanate / pour l'application de l'isocyanate	0163333 0640651
[M]	Montagepaste (für R- und RS-Ausführung) / assembly paste (for version R or RS) / pâte d'assemblage (de version R et RS)	0000233
[MS]	Montagespray (für R- und RS-Ausführung) / assembly spray (for version R or RS) / aérosol d'assemblage (de version R et RS)	0000118







### Headquarter and production

**WIWA Wilhelm Wagner GmbH & Co.  
KG**

Gewerbestraße 1–3  
35633 Lahnau  
Germany  
Phone: +49 (0)6441 609-0  
Fax: +49 (0)6441 609-2450  
Email: [info@wiwa.de](mailto:info@wiwa.de)  
Website: [www.wiwa.de](http://www.wiwa.de)

### WIWA subsidiary USA

**WIWA LLC – USA, Kanada,  
Lateinamerika**

107 N. Main St.  
P.O. Box 398, Alger, OH 45812  
USA  
Phone: +1-419-757-0141  
Fax: +1-419-549-5173  
Email: [sales@wiwa.com](mailto:sales@wiwa.com)  
Website: [www.wiwausa.com](http://www.wiwausa.com)



QR-Code

**[www.wiwa.de](http://www.wiwa.de)**