


Betriebsanleitung für AIRLESS-Pistole

Modell WIWA 500 F

Bestellnummer -0012092-

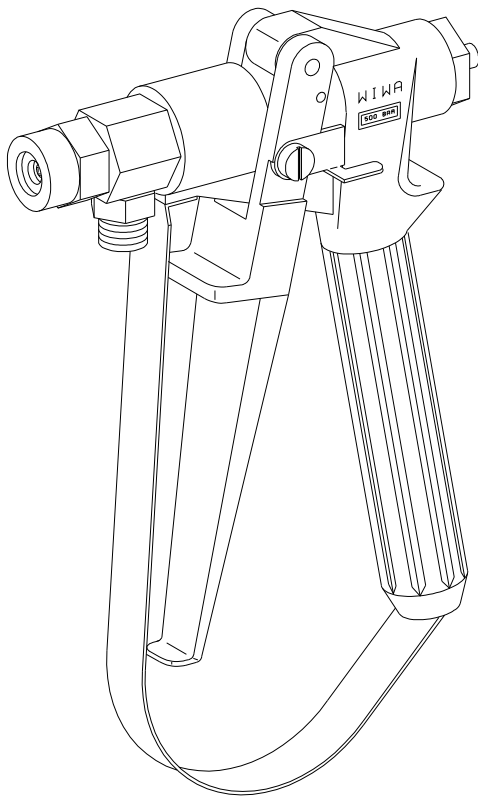

ACHTUNG !
Verletzungsgefahr bei Nichtbeachtung
der Sicherheitsvorschriften !

MONTAGEANLEITUNG

I. FARBTEIL:

Demontage: Überwurfmutter (1) mit Düse und Dichtung (2) oder Umkehrschalter und Dichtung abnehmen (Schlüsselweite SW 22) Abzughebel in Stellung "Offen" halten und Ventilsitz (3) herauserschrauben (SW 12), Dichtung (4) abnehmen. Führungshülse (16) drehen (hierzu Innensechskant-Schlüssel in Bohrungen am vorderen Rand der Führungshülse stecken) bis Gewindestift (15) mit Aussparung am Pistolenkörper (13) übereinstimmt. Gewindestift eine Umdrehung lösen. Nadel (5) nach vorn herausziehen.

Mutter (11) abschrauben (SW 19), gesamten Einsatz (6) nach vorn herausziehen. Dichtungen (7) und (12) falls beschädigt herausnehmen. Stopfbuchschraube (10) entfernen und Packung (8) herausdrücken. Alle Teile in Lösungsmittel reinigen.

Montage: Packung (7) einsetzen. Stopfbuchschraube (9) einschrauben (nicht festziehen!) evt. herausgenommene Dichtungen (7) und (12) einsetzen. Einsatz (6) einschieben, Mutter (11) aufschrauben und festziehen. Nadel (5) von vorn einstecken und Gewindestift (16) wieder fest anziehen, Dichtung auf Ventilsitz (3) auflegen. Abzughebel in Stellung "Offen" halten. Ventilsitz (3) einschrauben und festziehen. Stopfbuchschraube (9) leicht anziehen.

Wir empfehlen alle Teile vor dem Zusammenbau mit einem säurefreien Fett einzufetten.

II. DRUCKTEIL:

Demontage: Gewindestift (15) lösen, Verschlußschraube (20) abschrauben (SW 24). Federn (18) und (19) herausnehmen. Führungshülse (16) nach hinten herauschieben.

Montage: Führungshülse (16) einfetten und einschieben, Federn einfetten und einsetzen. Verschlußschraube (20) aufschrauben und festziehen. Den beigegefügt Innensechskant-Schraubendreher von hinten durch die Bohrung in der Verschlußschraube (20) einführen und mit der Ansatzschraube (17) die Ventilschraube (5) so einstellen, daß ein merkbares Spiel am Abzughebel (29) entsteht. Gewindestift (15) festziehen.

Ihre WIWA 500 F Airless-Pistole ist für einen Materialdruck bis 500 bar ausgelegt.

WARTUNG:

Um eine dauerhafte Schmierung der Pistole zu gewährleisten, Abzughebel (29) zum Anschlag drücken, durch die Bohrung der Verschlußschraube (20) Öl einfüllen, nachdem die Schraube (21) entfernt wurde.

Den Anzughebel wieder in die Ausgangsstellung bringen und Schraube (21) wieder einschrauben.

REINIGUNG:

Ihre WIWA-Airless-Pistole ist sofort nach dem Gebrauch zusammen mit Ihrem WIWA-Airless-Farbspritzgerät mit dem jeweiligen zur verarbeiteten Farbe gehörigen Verdünnern kräftig durchzuspülen, bis das Reinigungsmittel sauber aus der Pistole austritt. Dann ist die Pistole äußerlich zu reinigen.

SICHERHEITSVORSCHRIFTEN:


Halten Sie die Airless-Pistole **niemals** gegen den eigenen Körper oder in Richtung auf andere Personen! Halten Sie Ihre Hand **niemals** vor die Düse oder bei abgenommener Düse vor die Pistole! Verletzungsgefahr! Bei Arbeitsunterbrechungen jeder Art, auch bei kurzzeitigen Unterbrechungen ist die Pistole durch Waagerechthaltung des Sicherungshebels (nach hinten) zu sichern!

Sollte es einmal notwendig sein, die WIWA-Airless-Pistole zu demontieren, dann beachten Sie bitte die nachfolgende Montageanleitung!

Operating Instructions for AIRLESS Gun

Modell WIWA 500 F

Order.-N.r -0012092-

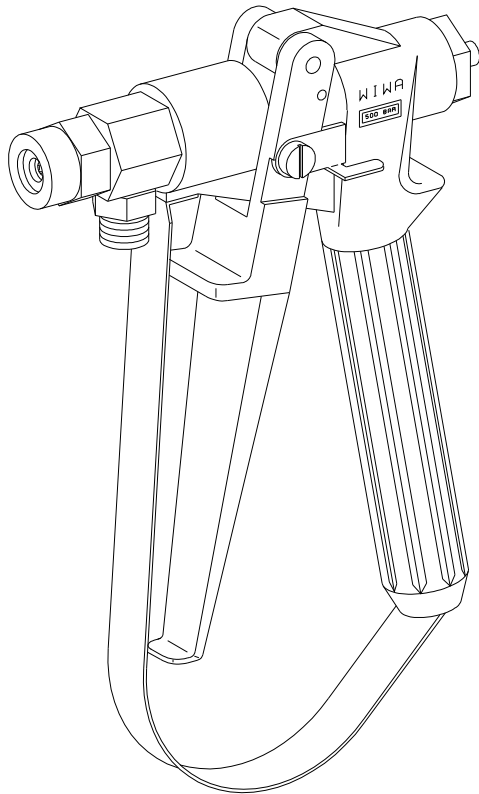

CAUTION !
Handle gun with care - Nozzle
velocity dangerous.
Read instructions carefully !

The WIWA-Airless gun, model WIWA 500 F, has been designed to withstand operating pressures of 500 bar.

MAINTENANCE:

For smooth operation and a long trouble free life of the spray gun, apply oil through boring of closure screw (20) by having removed screw (21) and trigger (30) pulled. After filling of oil, bring trigger back to "closed" position, relocate screw (21) and tighten.

CLEANING:

Clean gun at completion of each day's spraying with nozzle removed by flushing with compatible solvent. Use small amounts of solvent repeatedly. Proper cleaning indicated by clean solvent leaving gun.

Wipe off gun from the outside.

Keep spray tip or nozzle attachment stored in solvent.

IN OPERATING THE GUN REMEMBER THE FOLLOWING:

Never point gun at any human being or parts thereof in any proximity. Engage safety lever at all times when not actually spraying - flip lever in horizontal position.

Never attempt to change spray nozzle without first shutting off pump and releasing fluid pressure.

Do not spray solvent under pressure through the gun nozzle. Explosion or fire could result from static electricity build-up.

Always remove nozzle from gun before cleaning.

SERVICE INSTRUCTIONS:

I. PAINT SECTION:

Disassembly: Remove retaining nut (1) tip - or, if used, WIWA "EASY-CLEAN" nozzle attachment - and gasket (2), using open end wrench (a/f 22mm). Holding trigger in "OPEN"-position unscrew valve seat (3) (using open end wrench a/f 12mm) and remove gasket (4). Turn guide sleeve (16) to align threaded pin (15) with recess in gun body (13). Insert Allen-key in holes provided to rotate item 16 into position. Loosen set screw (16) by one revolution. Now pull out needle (5) from front of gun. Using open end wrench (a/f 19mm) remove nut (11) and pull out inset (6) from front of gun. Remove, if damaged, gaskets (7) and (12). Now unscrew packing screw (9) and pull out packing (7). Clean all parts in compatible solvent, inspect and replace.

Assembly: Insert packing (7) and packing screw (9). Do not tighten item 9 at this stage. Allow for item (7) and (12). Install inset (6) and nut (11), tighten. Introduce needle (5) from forward end and secure with set-screw (15). Place gasket (4) onto item 3. Holding gun in "OPEN"-position, screw in valve seat (3) and tighten. Now tighten packing screw (9) slightly.

Apply a light coat of grease to all parts before assembly. Use industrial vaseline or other acid-free grease.

II. PRESSURE SECTION:

Disassembly: As above, align threaded pin (15) and loosen, remove closure screw (20), using open end wrench a/f 24mm. Take out spring (18) and (19). These are inserted into each other. Now push out guide sleeve (16) to the rear.

Assembly: Grease guide sleeve (16) and spring (18) and (19) and install. Relocate closure screw (20) and tighten. Probe Allen-key provided through opening in closure screw (20) into shoulder screw (17). Now, using shoulder screw (17) adjust needle (5) that a noticeable travel of the trigger (29) can be felt. Now tighten threaded pin (15).

